


Quick reference hand sheet

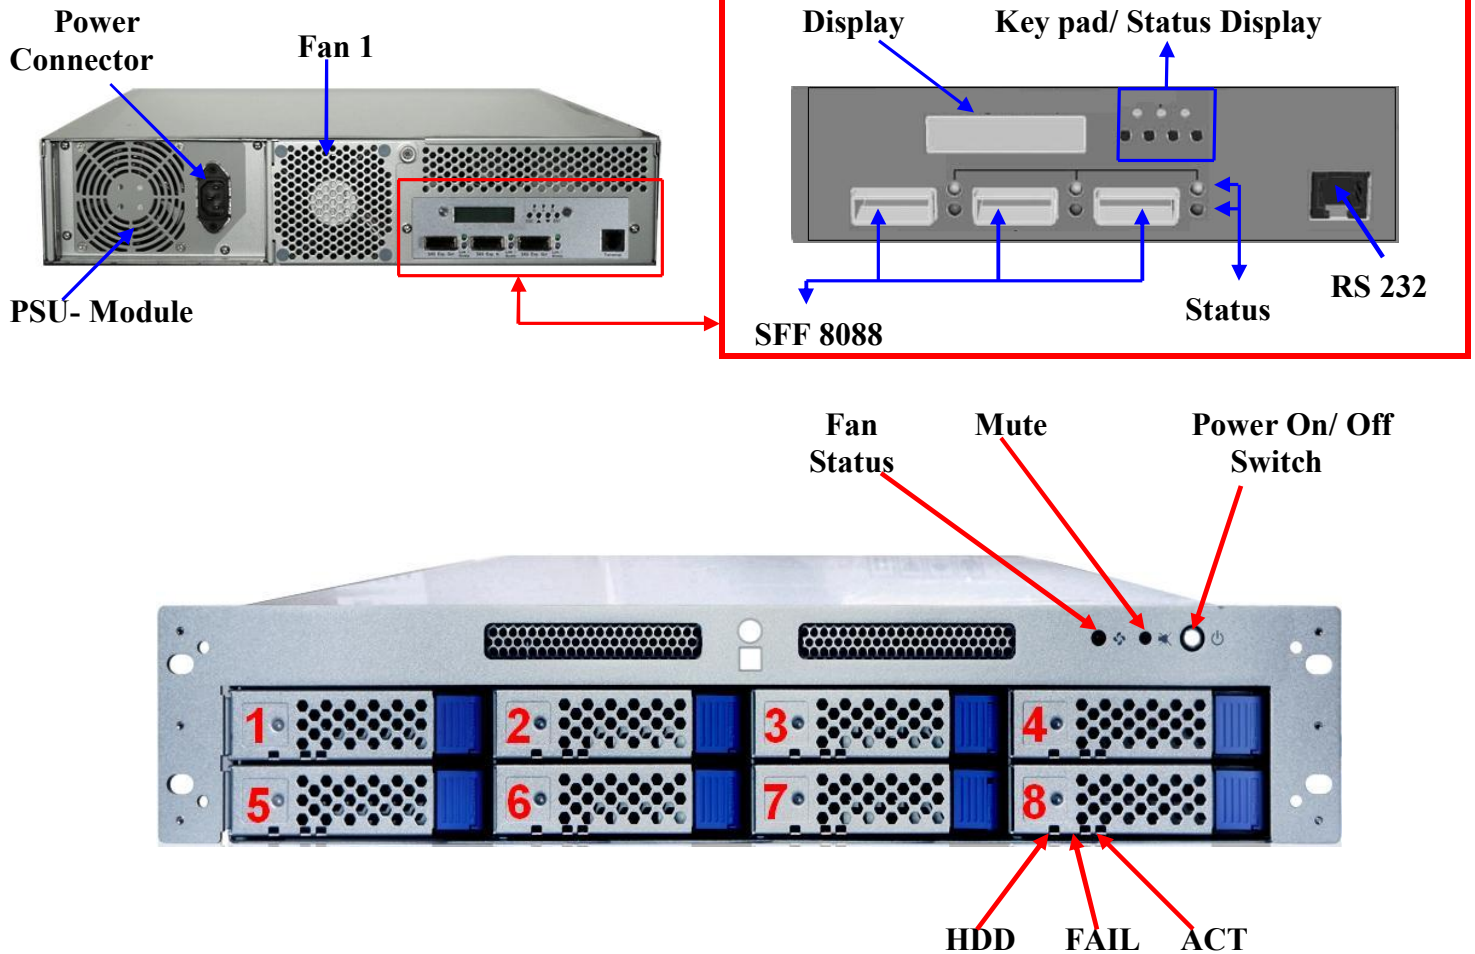

SFF 8088	: Connection for MiniSAS 8088 connector
Display	: Status information
Keypad/ Status Display	: System keypad and status display for power, busy and fault
RS 232	: CLI configuration
Status	: Link/ Activity LED for Expander port
Power Connector	: For power cord connection
Lock	: Lock to prevent unauthorized access
Power ON Status	: Power On indicator
Fan Status	: Fan failed indicator
Power ON / OFF Switch	: Switch to turn On/ Off the system
Mute	: Alarm Mute



* Number sticker provided for hard drive tray label.

Note: Please refer to system operational user manual for further questions.