

Instruction for opening LCD1U17-20, LCD1U17-21 & LCD1U19-22

1) Press the button on the front panel in order to release the two point lock.



2) Pull the LCD panel to slide out the LCD drawer.



3) Flip up the LCD panel.



4) Pull out the keyboard drawer to access the keyboard & mouse.

