


Synergy Global Technology Inc

www.RackmountMart.com

Assembly Instructions
Wall Mount Combination Lock
Part Number: MP1202-W

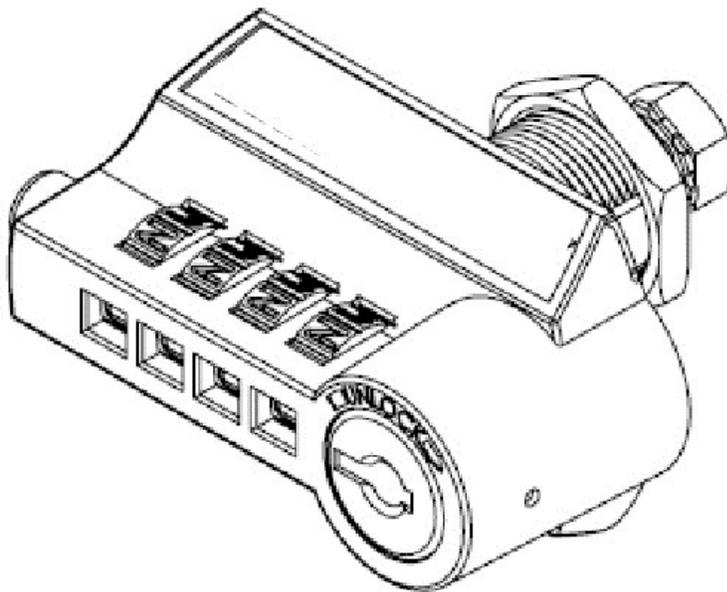


Toll Free: 1-888-865-6888


Tel: 510-226-8368 Fax: 510-226-8968

Email: sales@RackmountMart.com

Tools needed:

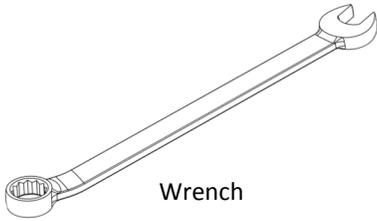

Parts you may need (extra)....

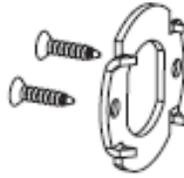


Spur washer and screws are only when the lock is being used in a wood door or drawer



Offset cam included if you are using this lock in a drawer or cabinet other than our WB12xx Wallmount Cabinets.

How to install:

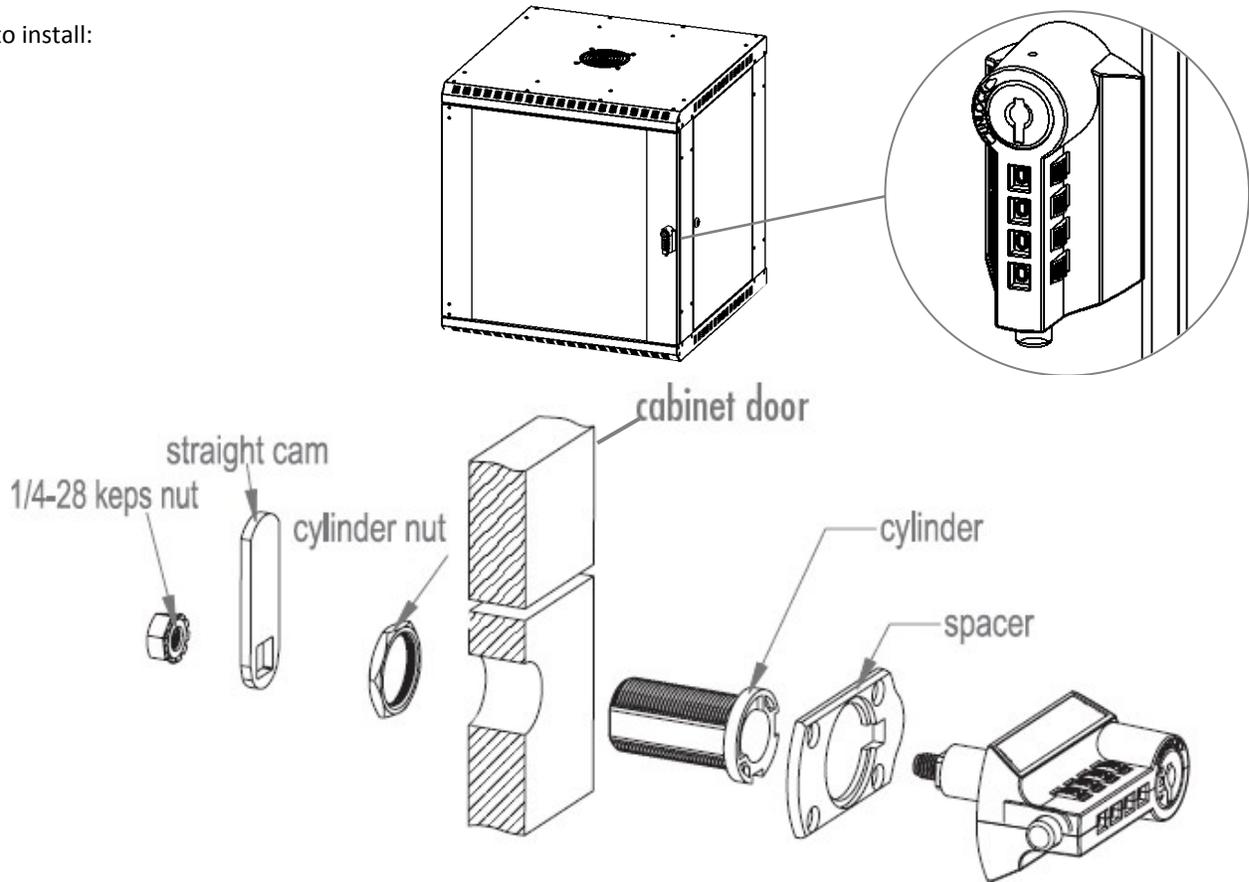

Unlock using combination:

- Factory set combination is 0-0-0-0.
- Turn wheels until correct combination appears in the combination windows.
- Press button, rotate housing to unlatch.
- Scramble wheels to lock.

Unlock using key:

- Insert key into lock plug; rotate key 90° clockwise.
- Rotate housing to unlatch.
- Important: Rotate key 90° counterclockwise to lock.

***Change the combination: See next page.**

For details about product warranty, please visit www.RackmountMart.com

Toll Free: 1-888-865-6888


Tel: 510-226-8368 Fax: 510-226-8968

Email: sales@RackmountMart.com

*Change the combination:

Changing the combination:

- Set to correct combination.
(Factory set combination is 0-0-0-0.)
- Insert key and turn 90° clockwise to unlock.
- Remove the key.
- Insert the end of a large paper clip (see diagram).
- Push end of paper clip all the way in against the spring. Press and hold paper clip against spring tension.

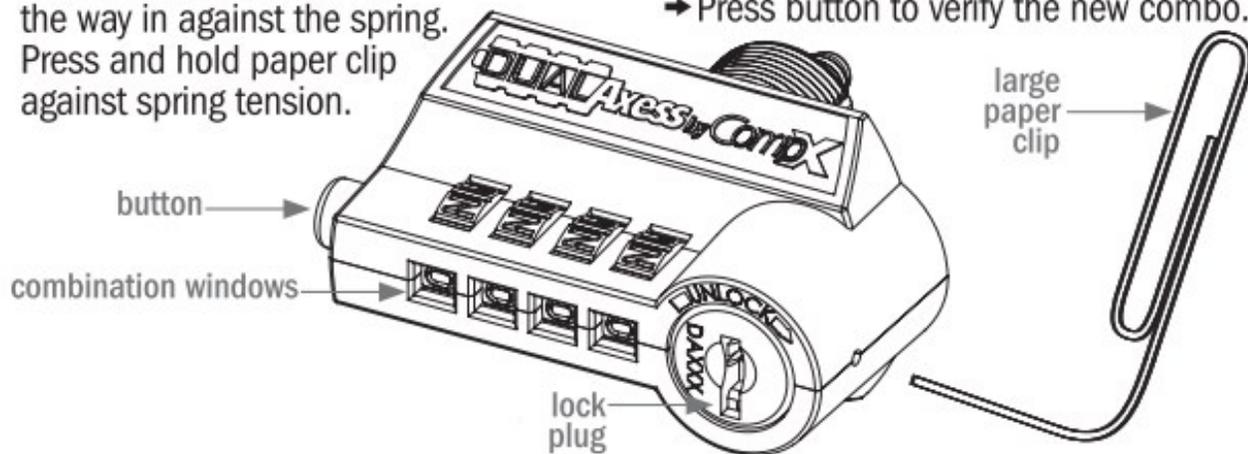

- While holding paper clip firmly in place, spin the dials to the new desired code in the combination windows. Remove paper clip, and record the new combo.



- Insert key and turn 90° counterclockwise.
- Remove the key.
- Press button to verify the new combo.

For details about product warranty, please visit www.RackmountMart.com

Toll Free: 1-888-865-6888

Tel: 510-226-8368 Fax: 510-226-8968

Email: sales@RackmountMart.com