



Synergy Global Technology Inc


www.RackmountMart.com

Assembly Instructions Open Frame Swing-Out

Part Numbers:

WR1208-S

WR1209-S

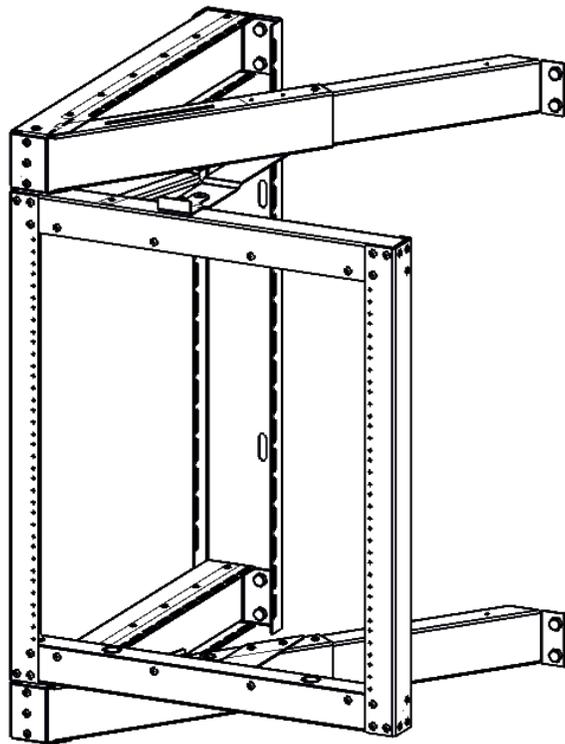


Toll Free: 1-888-865-6888


Tel: 510-226-8368 Fax: 510-226-8968

Email: sales@RackmountMart.com


Tools needed:

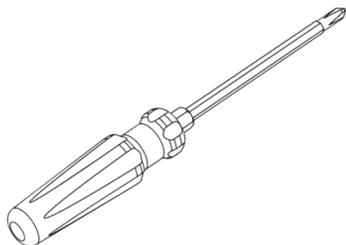

Philips Head ScrewDriver

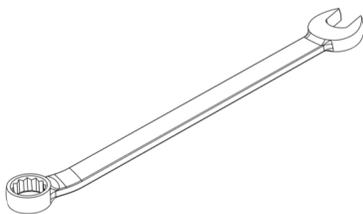


3/8" Wrench

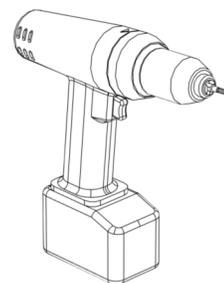


Power Drill

What's in the box?


** You will need to supply your own mounting hardware

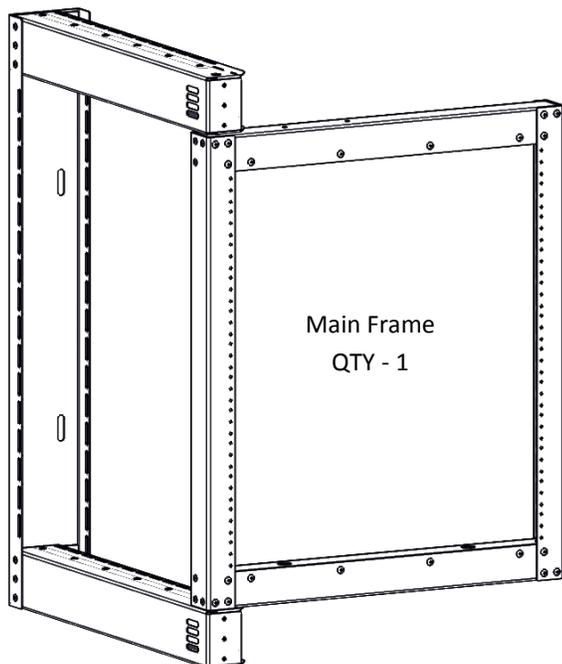

Main Frame
QTY - 1

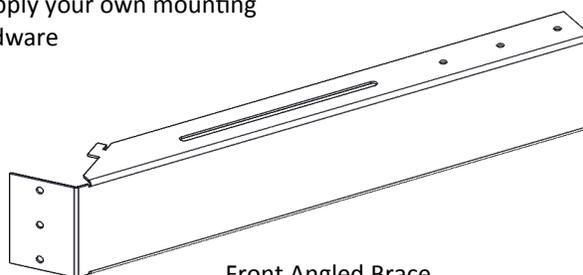


Front Angled Brace
QTY - 2

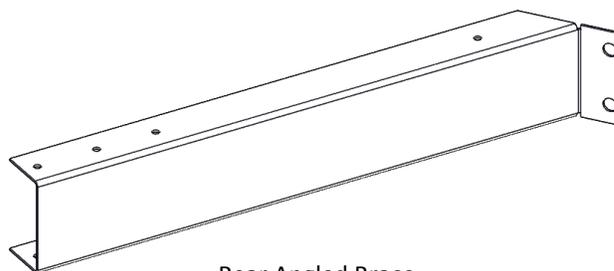

Rear Angled Brace
QTY - 2



Swing-Out Brace
QTY - 2

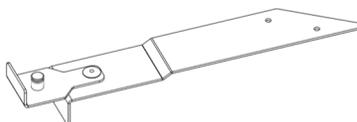


Upper Stop Bracket w/Latch
QTY - 1




Lower Stop Bracket
QTY - 1




Nylock Nut
QTY - 8

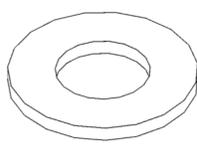

Flat Washer
QTY - 4



6-32 Screw
QTY - 4

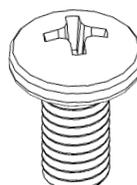


10-32 Screw
QTY - 14




Black Cap
QTY - 4

Step 1:

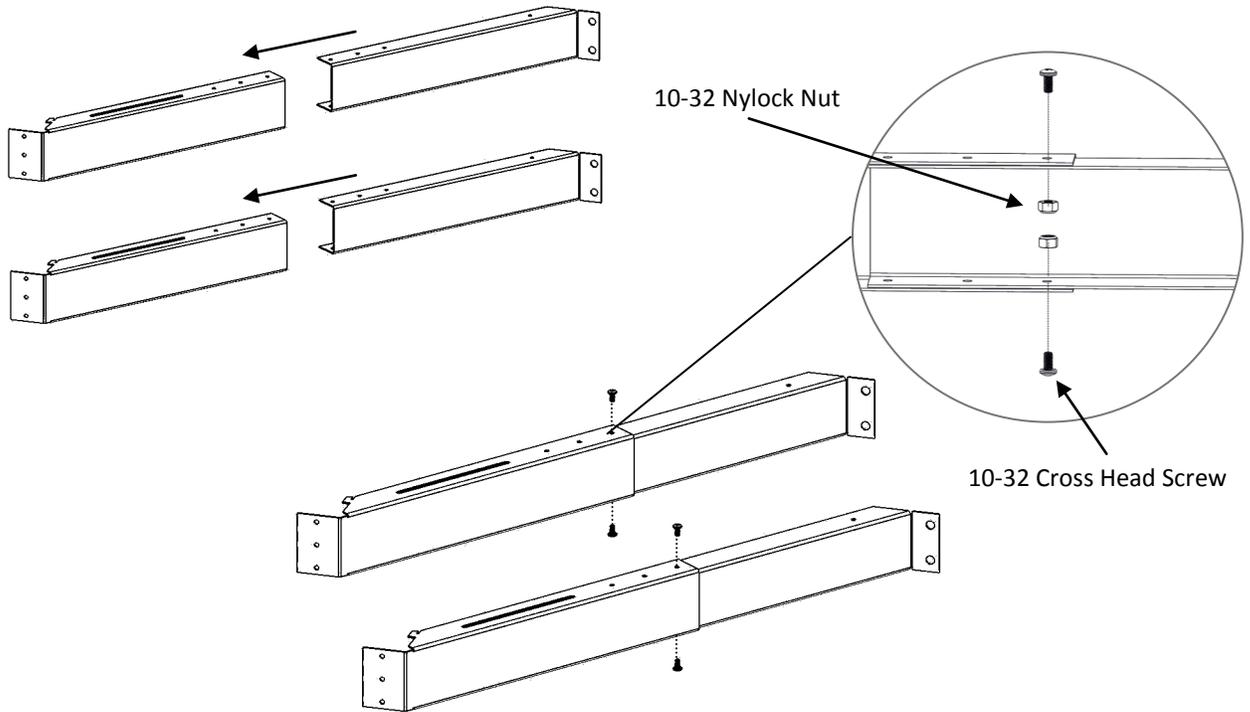


Step 2:

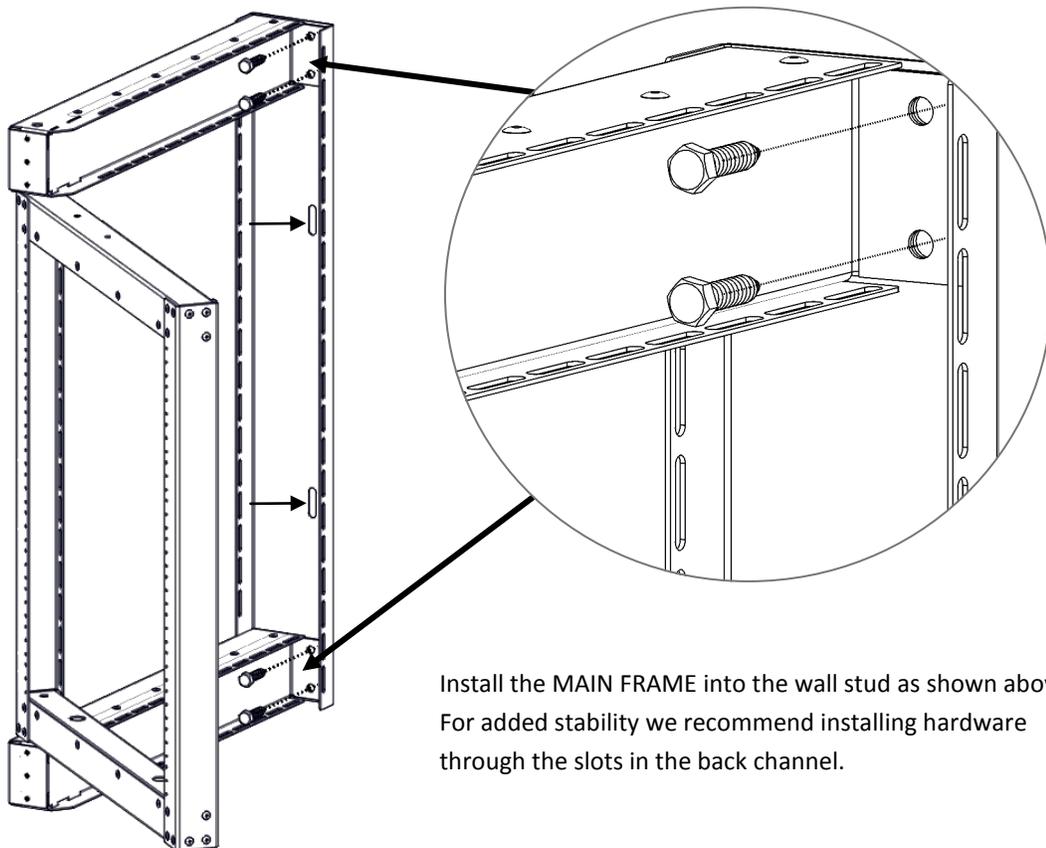


**** Mounting Hardware Not Included ****

Step 3:

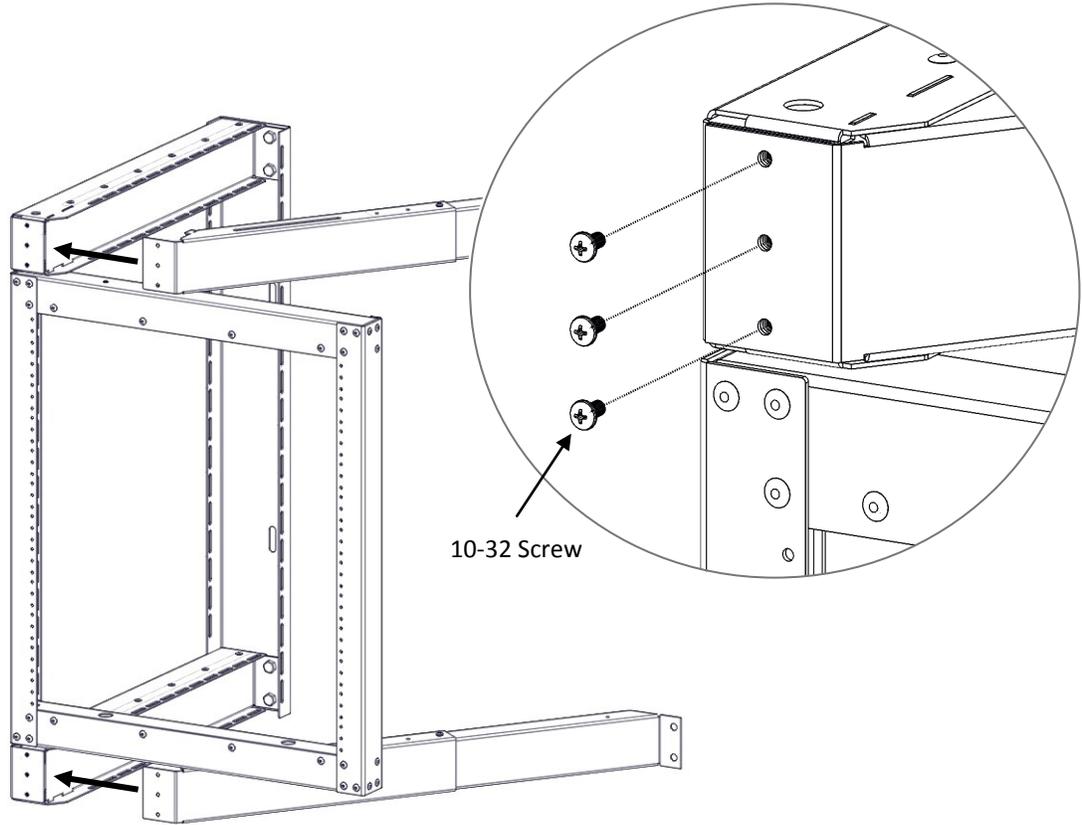


Step 4:

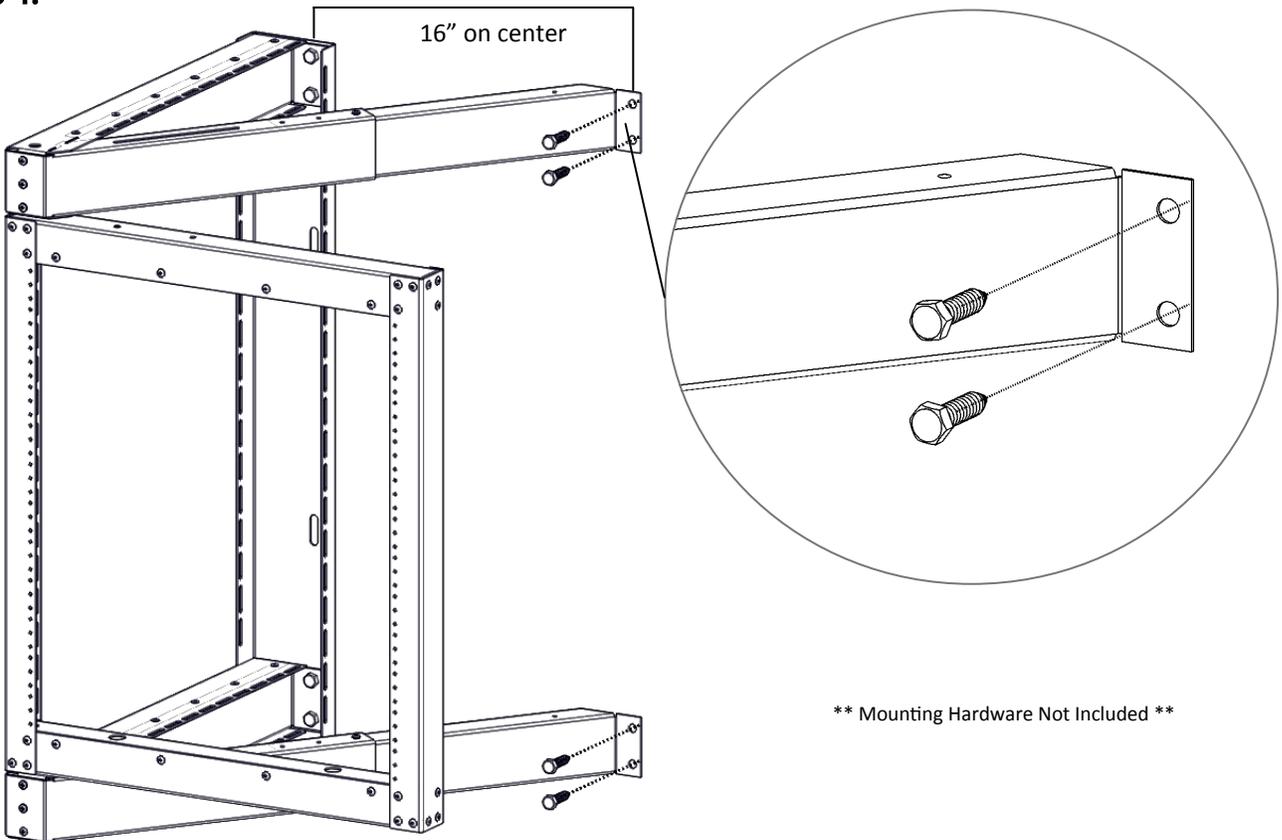


Step 5:


←
Swing gate open

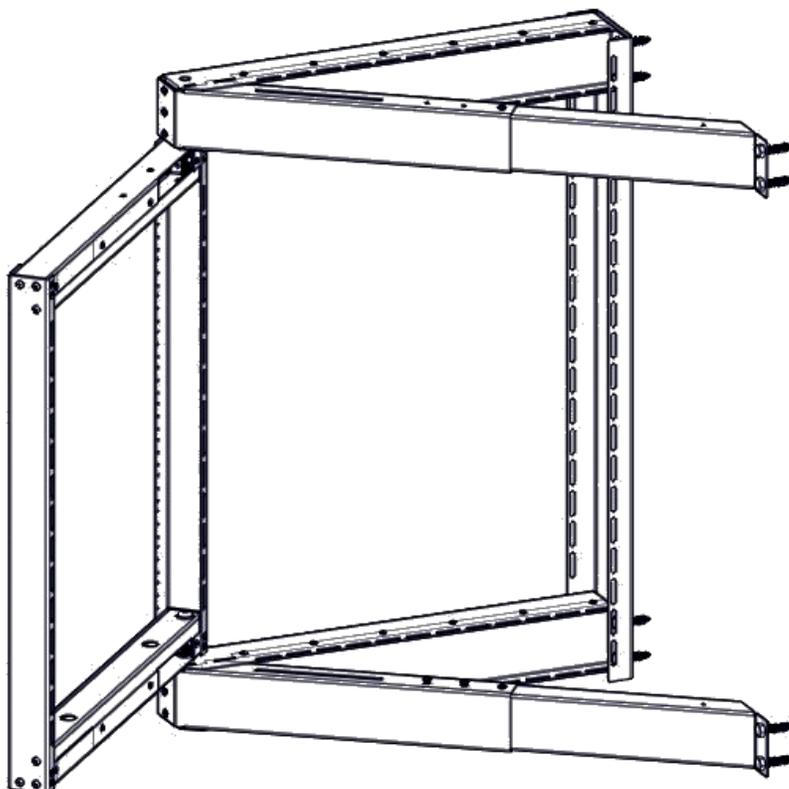


Step 6:

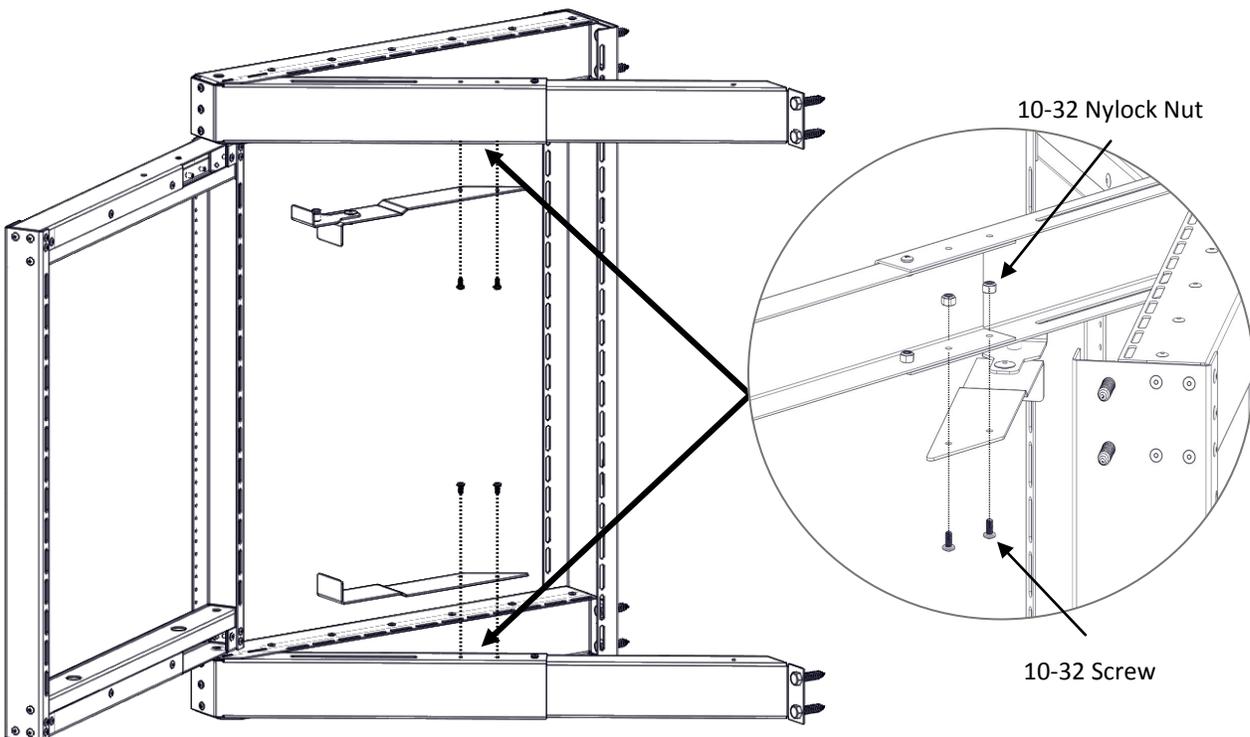

Step 7:

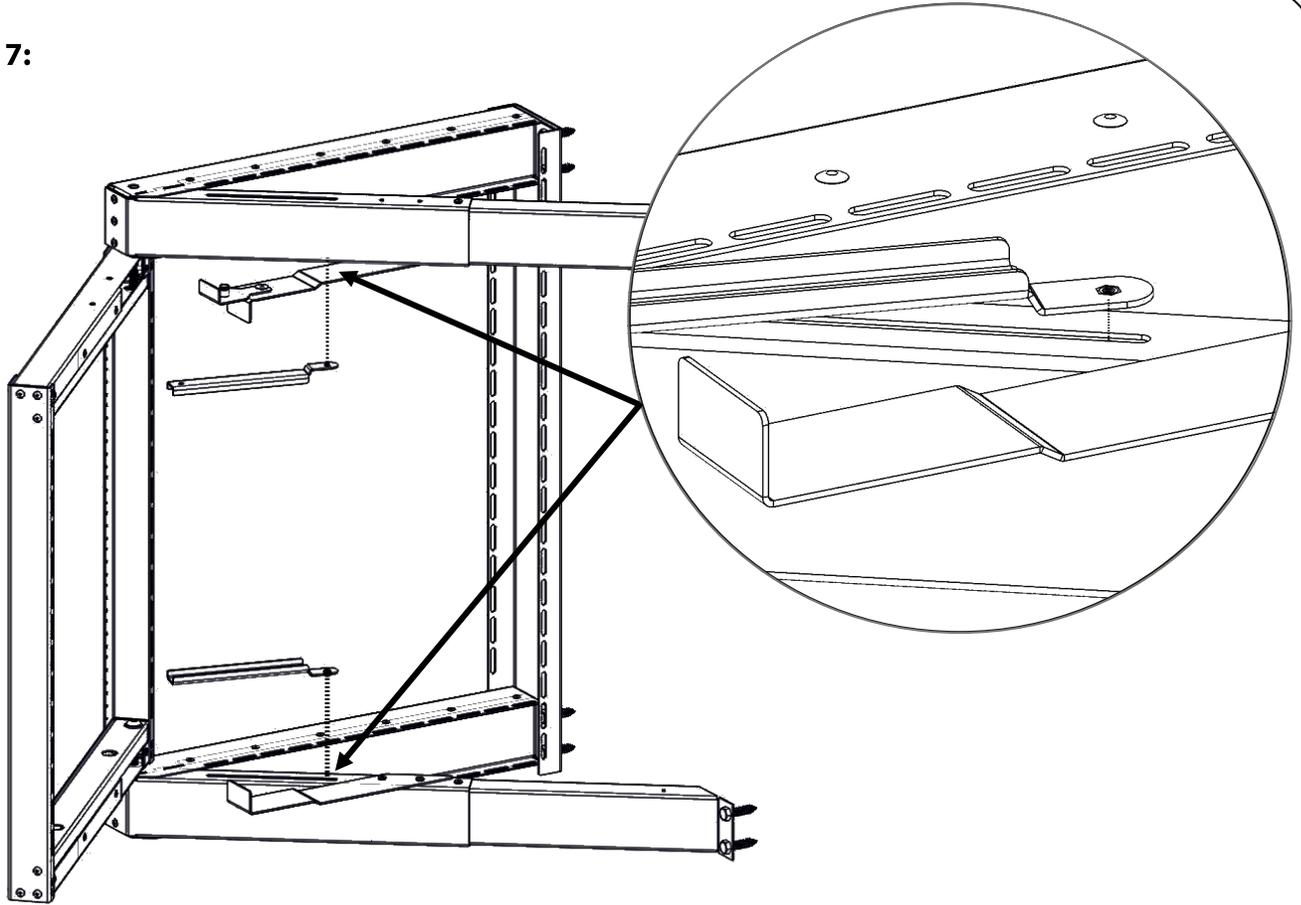


Step 8:

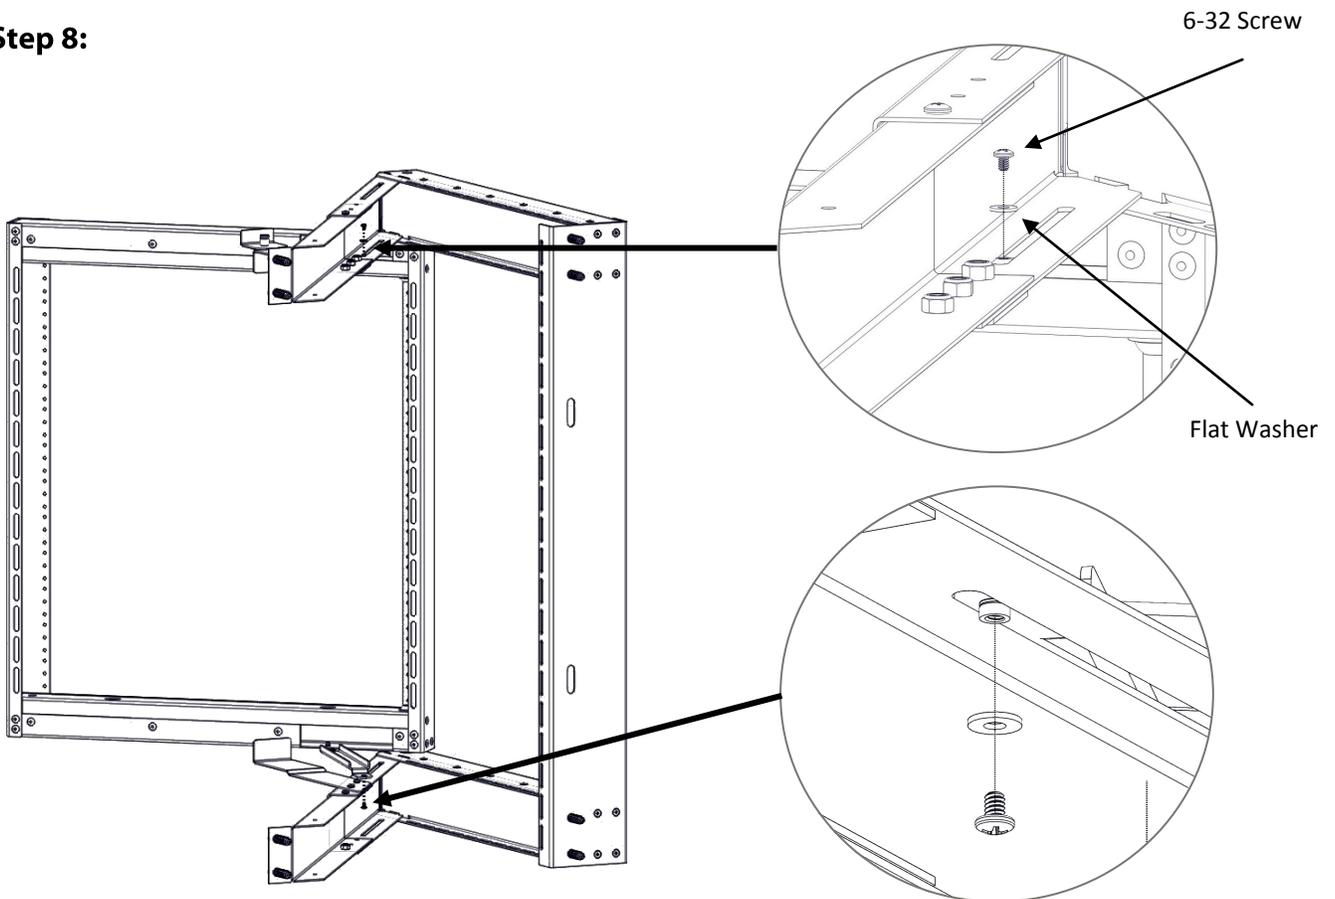


Step 9:

➔
Swing Gate
Closed

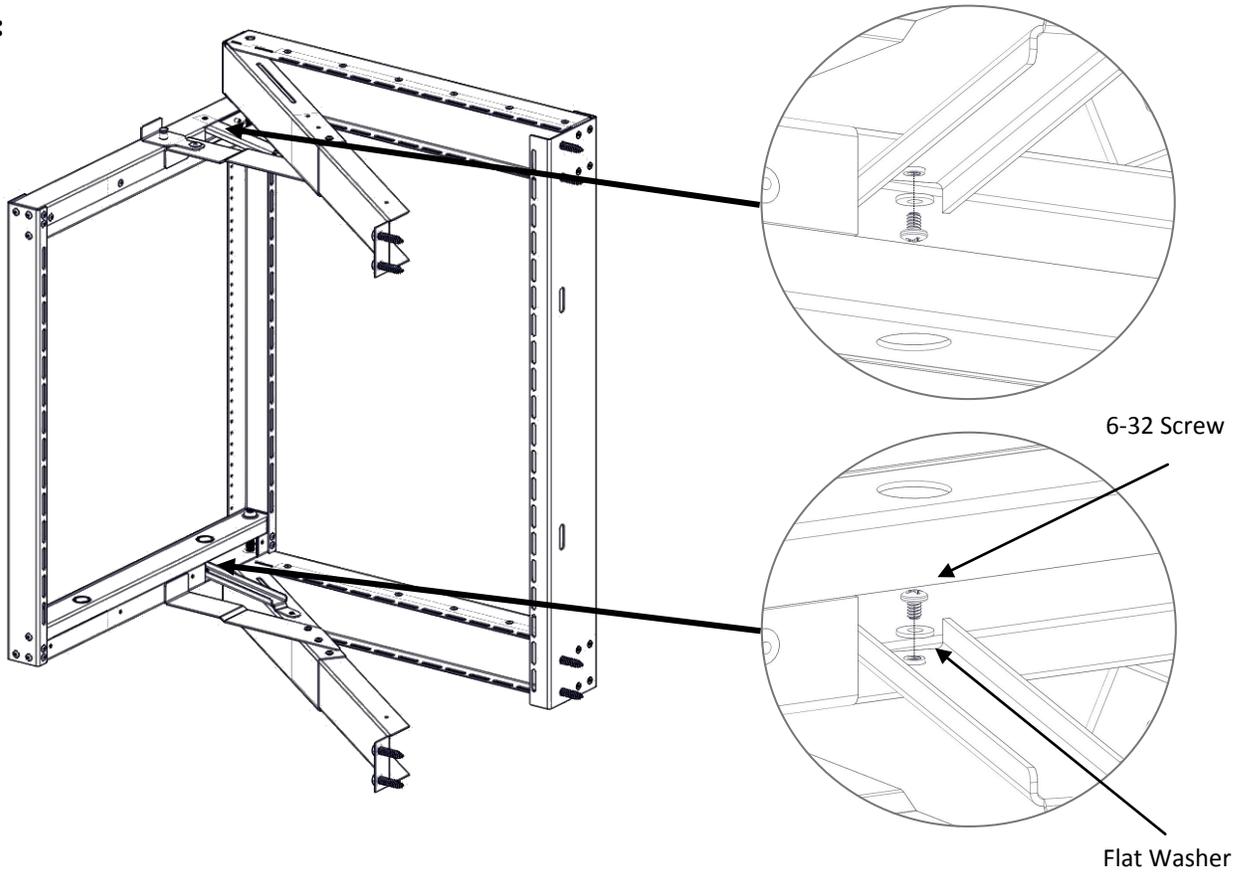

Step 10:

3-4" Round Cap

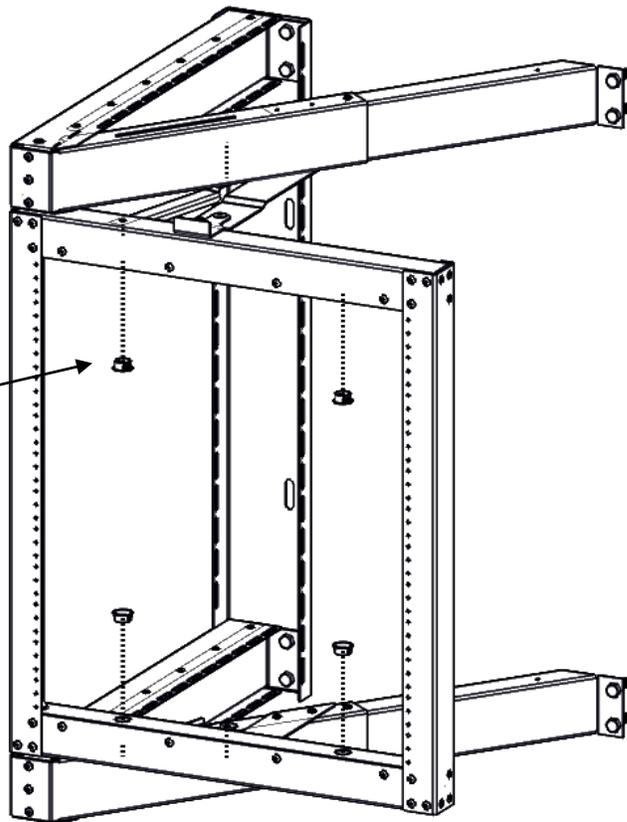

To latch and unlatch the gate:

