

Toll Free: 1-888-865-6888

Tel: 510-226-8368 Fax: 510-226-8968

Email: sales@RackmountMart.com

User Manual 17" / 19" LCD



LCD1U17-01 / LCD1U19-01

1U LCD Console Drawer

Options:

- AV / DVI-D / HDMI
- Full Range KVM
- DC power

F© (€ CA CA





REACH

Legal Information

First English printing, January 2023

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

Safety Instructions

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:

Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or
failure to follow instructions supplied with the product.
Repair or attempted repair by anyone not authorized by us.
Any damage of the product due to shipment.
Removal or installation of the product.
Causes external to the product, such as electric power fluctuation or failure.
Use of supplies or parts not meeting our specifications.
Normal wear and tear.

Any other causes which does not relate to a product defect.
 Removal, installation, and set-up service charges.

Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Contents

< Part. 1 >	LCD1U17-01 / LCD1U19-01	
1.1	Package Content	P.1
1.2	Structure Diagram & Dimension	P.1
1.3	Installation	P.3
1.4	Connection	P.5
< Part. 2 >	Specifications / OSD	
2.1	Product Specifications	P.6
2.2	Keyboard / Mouse Specifications	P.9
2.3	On-screen Display Operation (OSD)	P.10
< Part. 3 >	Options	
3.1	3G / HD / SD-SDI Broadcast-grade input	P.12
3.2	HDMI, DVI-D, S-Video + BNC	P.13
3.3	Touchscreen: Projected Capacitive (10-point touch) Resistive (1-point touch)	P.14
3.4	DC Power: 12V / 24V / 48V / 125V / 250V	P.16
3.5	2-post rack mounting brackets	P.17
< Part. 4 >	KVM Integration	
4.1	LCD1U17-01/LCD1U19-01	P.18

Before Installation

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

How To Clean Your LCD Monitor



Caution :

- To avoid the risk of electric shock, make sure your hands are dry before unplugging your monitor from or plugging your monitor into an electrical outlet.
- When you clean your monitor, do not press down on the LCD screen. Pressing down on the screen can scratch or damage your display. Pressure damage is not covered under warranty.
- Use only cleansers made specifically for cleaning monitors and monitor screens. Cleansers not made to clean monitors and monitor screens can scratch the LCD display or strip off the finish.
- Do not spray any kind of liquid directly onto the screen or case of your monitor. Spraying liquids directly onto the screen or case can cause damage which is not covered under warranty.
- Do not use paper towels or abrasive pads to clean your monitor. Using an abrasive pad or any wood based paper product such as paper towels can scratch your LCD screen.

Cleaning Your Monitor

To clean your LCD safely, please follow these steps:

- ① Disconnect the power cord.
- ② Gently wipe the surface using a clean, dry microfiber cloth. Use as little pressure as possible.

Cleaning Tough Marks and Smudges

To remove tough marks and smudges, please follow these steps:

- ① Disconnect the power cord.
- Spray a small amount of non-abrasive cleanser on a microfiber cloth.
- Caution: Do not spray or apply any liquids directly onto the monitor. Always apply the solution to your microfiber cloth first, not directly on the parts you are cleaning.
- Gently wipe the surface. Use as little pressure as possible.
- Wait until your monitor is completely dry before plugging it in and powering it up.

< Part 1 >

< 1.1 > Package Content




LCD1U17-01 or LCD1U19-01 unit X 1

- LCD-A1014A 6ft VGA console cable X1
- Power cord X 1
- M6 screw, cage nut & cup washer X8




The above package content is only for the single console models. It varies with options such as KVM, HDMI, DVI-D, AV & DC power.

< 1.2 > Structure Diagram

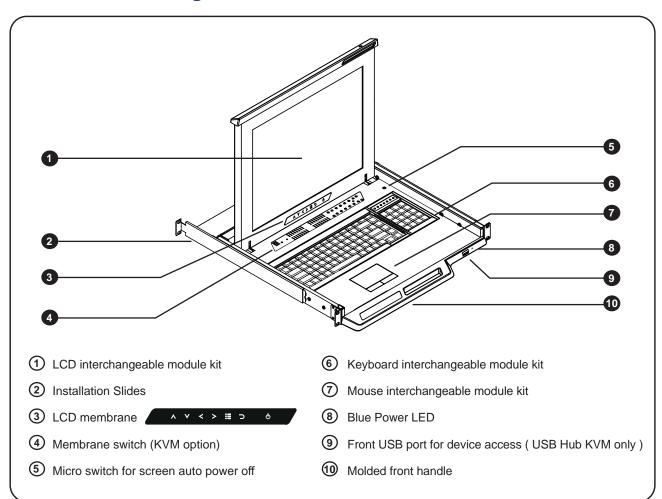

< 1.2 > Dimension

Front View




Rear View




 $\begin{array}{l} UNIT:mm\\ 1mm=0.03937\ inch \end{array}$

Side View



Top View

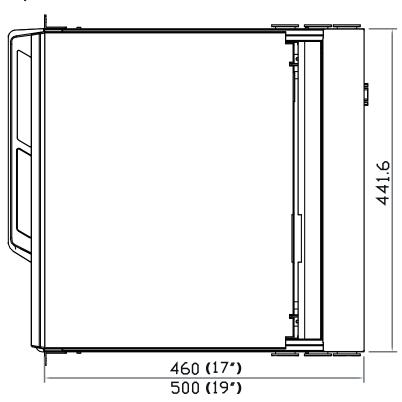


Model	Product Dimension (W x D x H)	Net Weight
LCD1U17-01	441.6 x 460 x 44 mm 17.4 x 18.1 x 1.73 inch	12 kg 26 lb
LCD1U19-01	441.6 x 500 x 44 mm 17.4 x 19.7 x 1.73 inch	12.7 kg 27.9 lb




The weight is only for the single console models. It varies with accessories & options such as KVM, HDMI, DVI-D, AV & DC power.

< 1.3 > Installation - Installation Slides

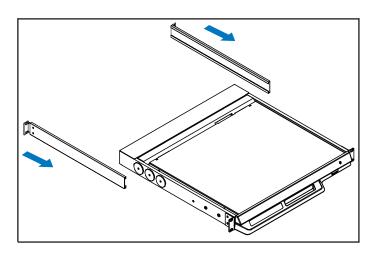


Step 1

■ Insert the left and right rear mounting brackets into the LCD console drawer.

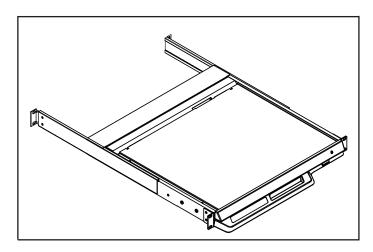

Step 2

- Measure the depth of the front and rear mounting rails.
- Align each rear mounting bracket to a suitable length.

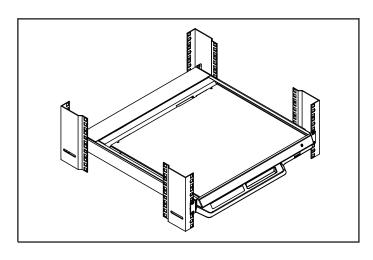

Step 3

Complete the installation

■ Fix the LCD console drawer into the rack.



M6 screw, cage nut & cup washer x 8 are provided.

< 1.3 > Installation- How to use the drawer



■ Hold the handle and slide out the drawer.



■ Flip up the LCD to a suitable angle.



■ Operate the LCD console drawer.




After use the drawer


Basically, user can push in the drawer back to park position by releasing the left & right slide lock arrow (as long as the drawer starts moving, he/she can release their finger right away, holding the arrow is not necessary).

< 1.4 > Connection to | USB Server

via LCD-A1014A cable

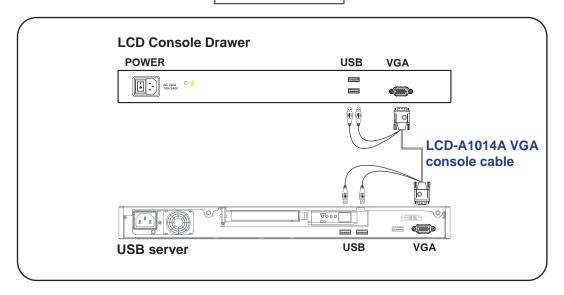

< 1.4 > Connection to external KVM via LCD-A1014A cable

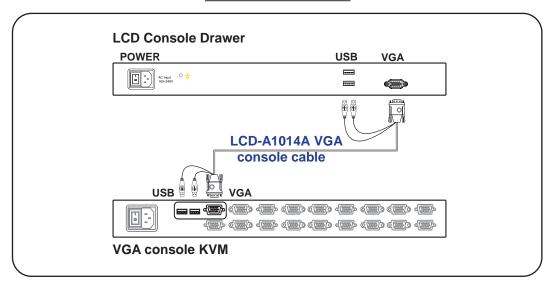



Caution: The LCD console drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and LCD console drawer. Before attempting to connect anything to the LCD console drawer, we suggest turning off the power to all devices. Apply power to connected devices again only after the LCD console drawer is receiving power. The company is not responsible for damage caused in this way.

< Part 2 >

< 2.1 > Product Specifications

LCD		LCD1U17-01	LCD1U19-01
Panel	Manufacturer	VNO	VNO
	Panel Size (diagonal)	17-inch TFT color LCD	19-inch TFT color LCD
	Display pixel (dots x lines)	1280 x 1024	1280 x 1024
	Brightness (typ.)	250	250
	Contrast Ratio (typ.)	1000:1	1000:1
	Color	16.7 M	16.7 M
	Viewing Angle (L/R/U/D)	85/85/80/80	85/85/80/80
	Response Time (ms)	5	5
	Dot pitch (mm)	0.264	0.294
	Display Area (mm)	337.92H x 270.33V	376.32H x 301.06V
	Surface treatment	Haze 25%, I	Hard-coating
	Surface hardness	3H	3H
	Backlight Type	LED	LED
	MTBF (hrs)	30,000	30,000

Video Digital		HDMI	HDMI 1.4, HDCP 1.4
Connectivity		DVI	DVI-D, TMDS single link
	Analog	VGA	Analog 0.7Vp-p
		Composite (BNC)	NTSC & PAL
		S-Video (4-pin)	NTSC & PAL
	Plug & Play	DVI / VGA	VESA EDID structure 1.3
	Synchronization	VGA	Separate, Composite & SOG

Power	Power Supply	Range	Auto-sensing 100 to 240VAC, 50 / 60Hz
	for Single Console Power Consumption	Screen ON	Max. 22W
		Power saving mode	Max. 2W
		Power button OFF	Max. 1W
		Screen ON	Max. 55W
	with KVM integration	Power saving mode	Max. 34W

^{*} For details, please refer to our KVM rear kit user manuals

Compliance	EMC	FCC, CE & CCC
	Safety	CE / LVD, UKCA & CCC
	Environmental	RoHS3 & REACH / WEEE

Environmental	1 9	Temperature	-20 to 65°C degree
Conditions		Humidity	10~90%, non-condensing
		Altitude	16,000 ft
		Temperature	-20 to 65°C degree
		Humidity	5~90%, non-condensing
		Altitude	40,000 ft
		Shock	10G acceleration (11ms duration)
		Vibration	10~300Hz 0.5G RMS random


Physical Specification		LCD1U17-01	LCD1U19-01
Specification	Product (WxDxH)	441.6 x 460 x 44 mm	441.6 x 500 x 44 mm
		17.4 x 18.1 x 1.73 inch	17.4 x 19.7 x 1.73 inch
	Net Weight	12 kg / 26 lb	12.7 kg / 27.9 lb

^{*} All dimensions stated are subject to change if options are selected / integrated to base model part codes


Applicable	VGA Input	PC Signal	1280 x 1024 x 60 / 75Hz
Format			1280 x 960 x 60Hz
			1280 x 768 x 60 / 75Hz
			1152 x 864 x 75Hz
			1024 x 768 x 60 / 70 / 75Hz
			848 x 480 x 60Hz
			800 x 600 x 60 / 72 / 75Hz
			720 x 400 x 70Hz
			640 x 480 x 60 / 72 / 75Hz
			640 x 400 x 70Hz
			640 x 350 x 70Hz
	HDMI Input	PC Signal	Same as VGA
		Video Signal	720p : 50 / 60Hz
			480p : 60Hz
			576p : 50Hz
		Audio Signal	2ch Linear PCM (32 / 44.1 / 48 KHz)
		Speaker	Dual Stereo Speaker, 2 x 2W

< 2.2 > Keyboard / Mouse Specifications

N keyboard integrated with touchpad

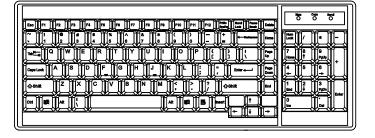



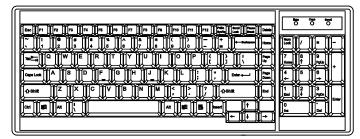



Key force	55 ± 5g
Travelling distance	3 ± 0.3mm
Switch life	> 10 million life cycle time
OS support	Windows / Linux / Unix / Mac OS

Supporting layouts

America



United States

EMEA













Asia





< 2.3 > On-screen Display Operation (OSD)




Membrane Switch	Function
٨	Turn the monitor on or off
	Display the OSD menu Act as an Enter key to select screen setting options
$\wedge $	Scroll through menu options and adjust the displayed control
	Exit the OSD screen Go back to the previous on-screen sub-menu or main menu

Remark : All LED touch buttons in WHITE light.

The LED of **Power** touch button will flash continuously when there is no signal input.

- 1 All the LED touch buttons will automatically turn off after 10 minutes of idle status (except the **Power** (1)).
- 2 Light up all membrane buttons, please press any button for 1 2 seconds (except the **Power**).
- 3 Select another video input (only available for models with multiple video input):
 - (a) Press the button \bigcirc to call up the on-screen video mode on top right corner.
 - (b) Use up/down arrow $\ \bigwedge\ \bigvee\$ to the select the video input
 - (c) Press the button \blacksquare to confirm the selection

< 2.3 > On-screen Display Operation (OSD)

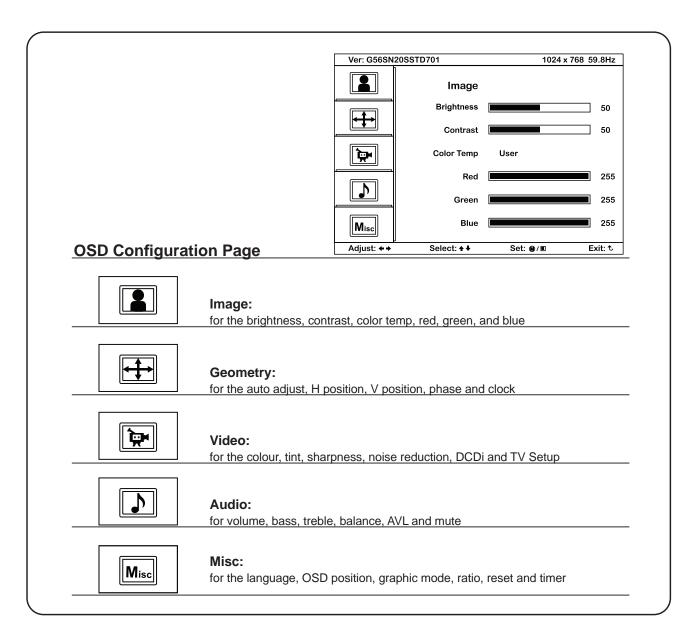

< 3.1 > Options : 3G / HD / SD-SDI input



Our SDI input is an ideal solution for the broadcast-grade video and high resolution CCTV market.

Designed for use with NOVA series displays, a SDI input module can support up to 1080p @60Hz resolution without using additional space or power and it comes standard with a 1-year warranty.

AC Input O = OUT - in OUT - in

*** For SDI option, LCD1U17-01 chassis extension in depth to 530mm (20.9") LCD1U19-01 chassis extension in depth to 570mm (22.4")

INPUT	3G-SDI IN	BNC x 1 / 0.8Vp-p (75 ohm)
	3G-SDI OUT	BNC x 1 / Active through, equalized & relocked
Standard Compliance	Video	SMPTE 425M / 274M / 296M / 125M ITU-R BT.656
	Audio	SMPTE 299M / 272M-C
Compatible Video Format	3G-SDI	1080p @60 / 50Hz, 4:2:2 1080p @30 / 25 / 24Hz, 4:4:4 1080i @60 / 50Hz, 4:4:4 720p @60 / 50Hz, 4:4:4
	HD-SDI	1080p @30 / 25 / 24Hz, 4:2:2 1080i @60 / 50Hz, 4:2:2 720p @60 / 50Hz, 4:2:2
	SD-SDI	480i @60Hz, 4:2:2
	ITU-R BT.656	576i @50Hz, 4:2:2
Compatible Audio Format	3G-SDI	48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized Video
	HD-SDI	48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized Video
	SD-SDI	48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized / Asynchronized Video
Max. Transmission Distance	3G-SDI	150m at 2.97Gb/s
75 ohm coaxial cable	HD-SDI	250m at 1.485Gb/s
	SD-SDI	480m at 270Mb/s
<u> </u>		-

< 3.2 > Options:

ADH Option


- **HDMI** (HDMI 1.4, HDCP 1.4
- DVI-D (DVI-D TMDS single lin)
- Audio input & output

HDMI Option

- **HDMI** (HDMI 1.4, HDCP 1.4)

BNC Option

- BNC (S-Video + Composite, BNC)





HDMI

LCD1U17-01 chassis extension in depth to 480mm (18.9")

LCD1U19-01 chassis extension in depth to 520mm (20.5")

S-Video & Composite

LCD1U17-01 chassis extension in depth to 530mm (20.9")

LCD1U19-01 chassis extension in depth to 570mm (22.4")

< 3.3 > Options : Touchscreen & driver



Projected Capacitive 10-pt Touch screen Specification

	17'					
Model	TPC Multi-touch					
Technology	Projected Capacitive					
Touch Point	10					
Input Type	Finger or Capacitive Stylus					
Resolution	4096 x 4096					
Touch Point Accuracy	± 2 mm					
Response Speed	< 5 ms					
Activation Force	< 5 g					
Surface Hardness	6H					
Light Transmission	> 85%					
Haze	3%↓					
Durability	50 million touches					
Top Layer	1.8 mm Glass					
Bottom Layer	0.7 mm Sensor Glass					
Thickness	2.7 ± 0.1 mm					
Connector	USB					
Compatibility	Linux / Android / Windows / Mac					

Resistive 1-pt Touch screen Specification


Model	17'	19"					
	TRB Resistive						
Technology	5-Wire Resistive						
Touch Point	Sin	gle					
Method	Stylus o	r Finger					
Activation Force	≤ 50g / St	ylus=R0.8					
Durability	35 millior	touches					
Response Time	15	ms					
Optical Transmittance	80%	± 3%					
Surface Hardness	3	H					
Haze	8% =	± 3%					
Glass	1.4 ±0.2 mm 3.2 ±0.2 mm						
Connector	USB Type A						
Compatibility	Windows 7 / X	P / Vista, Linux					

- USB touchscreen package includes 1 x 6ft USB cable, quick reference guideline and CD disc
- For detailed information, please refer to the attached CD disc
- As the touchscreen unit is not made of toughened glass, please handle it carefully

< 3.3 > Options : Touchscreen & driver



USB Touchscreen



TPC Driver



Connect the USB cable from the USB port on the LCD to a computer. The touch screen supports easy Plug-and-Play operations. There is no need to install additional drivers on the computer.

TRB Driver

Please follow the below steps to setup the touch screen:-

- **Step 1.** Run the bundled CD disc or download the driver from the link below : http://www.rackmountmart.com/downloads.html
- Step 2. Double click the Setup.exe
- Step 3. Follow the installation instruction to finish the setup
- Step 4. After installation, run the TouchKit program & the "4 point calibration"



Please do the initial calibration after the first setup




< 3.4 > Options : DC Power



Model	12V	24V	48V	125V	250V
Input rating					
Input voltage:	12-Volt	24-Volt	48-Volt	110-Volt	300-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V	66 ~ 160V	180 ~ 425V
Input current					
- No load	50 mA	50 mA	50 mA	35 mA	10 mA
- Full load	4950 mA	2450 mA	1220 mA	749 mA	600 mA
Output rating					
Output voltage:	12-Volt	12-Volt	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A	6.25A	12.5A
Efficiency	84%	85%	85%	91%	86%


DC power



*** For DC power option :

- (1) If the unit with LCD, earthing may be required
- (2) DC option excludes AC power adapter and power cord.
- (3) LCD1U17-01 depth will be extended from 460mm (18.1") to 530mm (20.9")
- (4) LCD1U19-01 depth will be extended from 500mm (19.7") to 570mm (22.4")


< 3.5 > 2-Post Rack Mounting Brackets

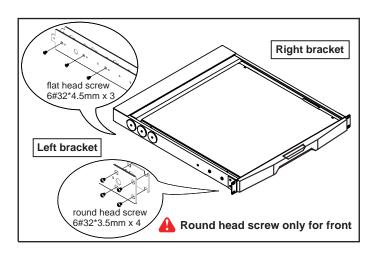

Step 1


- Before apply 2-post rack brackets, please release front mounting ears and rear mounting wheels.
- Attach left and right mounting brackets to the drawer with the screws below :

6#32*3.5 mm screw x 8 (only for front) 6#32*4.5 mm screw x 6 (only for rear)

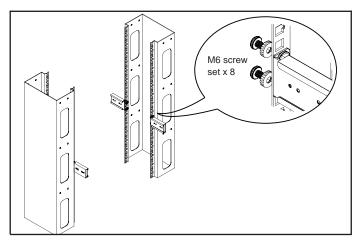


Step 2

- Attach the set of 4 mini brackets to the 2-post rack.
- M6 screw set is not provided.

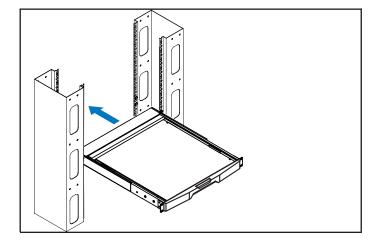

Step 3

■ Insert the drawer into the mini brackets.

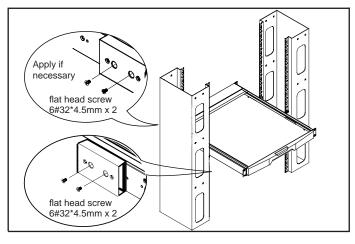

Step 4

- Fix the LCD console drawer to the mini brackets with 6#32*4.5 mm screw x 8.
- Installation completed



This step is necessary for front.
Failure to complete this will cause damage.

< Part. 4 > KVM Integration

2K	Local	Remote	IP	8-port	-	-
KVM	0	0	0	-8HD	-	-

DVI-D	o 	Local	Remote	IP	12-port	-	-
KVM		1	0	0	-12DVI	-	-

Cat6	Local	Remote	IP	8-port	16-port	32-port
Matrix	1	1	1	-	-MU163IP	-MU323IP
KVM	1	1	2	-	-MU164IP2	-MU324IP2
	1	1	0	-	-MU162	-MU322
	1	2	0	-	-MU163	-MU323
	1	3	0	-	-MU164	-MU324

Cat6	Local	Remote	IP	8-port	16-port	32-port
Combo	1	0	1	-U8KVM2IP	-U16KVM2IP	-U32KVM2IP
KVM	1	1	0	-U8KVM2	-U16KVM2	-U32KVM2
	1	0	0	-U8KVM	-U16KVM	-U32KVM

DB-15		Local	Remote	IP	8-port	16-port	32-port
Matrix	درييين	1	1	1	-M83IP	-M163IP	-
KVM		1	1	2	-M84IP2	-M164IP2	-
		1	1	0	-M82	-M162	-
	1	2	0	-M83	-M163	-	
		1	3	0	-M84	-M164	-

DB-15		Local	Remote	IP	8-port	16-port	32-port
Combo	حرييين	1	0	1	-8KVM2IP	-16KVM2IP	-
KVM		1	1	0	-8KVM	-16KVM2	-
		1	0	0	-8KVM-u	-16KVM-u	-

DB-15		Local	Remote	IP	8-port	16-port	32-port
USB Hub	<u>ر</u>	1	0	1	-H8KVM2IP	-H16KVM2IP	-
KVM		1	1	0	-H8KVM2	-H16KVM2	-
		1	0	0	-H8KVM-u	-H16KVM-u	-

Model	Product Dimension (W x D x H)	Net Weight
LCD1U17-01 with KVM	441.6 x 580 x 44 mm 17.4 x 22.8 x 1.73 inch	13 kg 28.6 lb
LCD1U19-01 with KVM	441.6 x 620 x 44 mm 17.4 x 24.4 x 1.73 inch	13.7 kg 30.1 lb

www.RackmountMart.com

