



Synergy Global Technology Inc

www.RackmountMart.com

Toll Free: 1-888-865-6888

Tel: 510-226-8368 Fax: 510-226-8968

Email: sales@RackmountMart.com

Single Rail LCD Console with CAT5 KVM Switch User Manual

Packing List

The single rail 15" / 17" / 19" LCD console with CAT5 KVM package consist of:

- 1 x 1U 19" rack mount console
- 2 x rails with front and rear bracket
- 2 x long brackets. (Needed for rack depth 828 ~ 1000mm)
- 1 x power cord
- 1 x quick installation guide
- 2 x key
- 6 x flat screws. (for rail mount to console body)
- 6 x screws. (for replace long bracket)

The single rail 20" LCD console with CAT5 KVM package consist of:

- 1 x 1U 19" rack mount console
- 2 x rails with front and rear bracket
- 1 x power cord
- 1 x quick installation guide
- 2 x key
- 6 x flat screws. (for rail mount to console body)

Check to make sure that the unit was not damaged in shipping. If you encounter a problem, contact your dealer.

Please read this manual thoroughly, and follow the installation and operation procedures carefully to prevent any damage to the product, and/or any of the devices that connect to it.

Safety Instructions

1. Please read these safety instructions carefully.
2. Please keep this User's Manual for later reference.
3. Please disconnect this equipment from AC outlet before cleaning. Don't use liquid or sprayed detergent for cleaning. Use moisture sheet or clothe for cleaning.
4. For pluggable equipment, the socked-outlet shall be installed near the equipment and shall be easily accessible.
5. Please keep this equipment from humidity.
6. Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
7. Do not leave this equipment in an environment unconditioned, storage temperature above 60⁰ C, it may damage the equipment.
8. The opening on the enclosure is for air convection hence the equipment from overheating. **DO NOT COVER THE OPENING.**
9. Make sure the voltage of the power source connect the equipment to the power outlet.
10. Please keep the power cord such a way that people cannot step on it. Do not place anything over power cord. The power cord must rate for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and the current rating marked on the product.
11. All cautions and warning on the equipment should be noted.
12. If the equipment is not in use for long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
13. Never pour any liquid into ventilation openings; this could cause fire or electrical shock.
14. Never open the equipment. For safety reason, qualified service personnel should only open the equipment.
15. If one of the following situations arises, get the equipment checked by service personnel.
 - The Power Cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment has not worked well or you cannot get it work according to User's Manual.
 - The equipment has dropped and damaged.
 - If the equipment has obvious signs or breakage.

Index of Contents

Packing List.....	I
Safety Instructions.....	II
Index of Contents	IV
1. General Information.....	6
1.1 Overview.....	6
1.2 Product Specification	2
1.2.1 15" LCD console with CAT5 KVM Specification	2
1.2.2 17" LCD console with CAT5 KVM Specification	6
1.2.3 17" Full HD LCD console with CAT5 KVM Specification	10
1.2.3 19" LCD console with CAT5 KVM Specification	14
1.2.4 20" LCD console with CAT5 KVM Specification	18
2. Panel Controls and OSD Function.....	22
2.1 Auto Tune.....	23
2.2 Input Source	23
2.3 Brightness.....	23
2.4 Contrast	24
2.5 Color	24
2.6 Position.....	25
2.7 Language.....	26
2.8 Recall.....	27
2.9 Exit.....	27
2.10 Power Indicator.....	27
3. Installation	28
3.1 Install single rail 15" / 17" / 19" LCD console with CAT5 KVM into Cabinet	28
3.1.1 Notes	28
3.1.2 Hardware Kits Contents	28
3.1.3 Installation Steps.....	29
3.1.4 Replace Longer Bracket Steps (For rack depth 828~1000mm)	31
3.1.5 Unload Steps	31
3.2 Install single rail 20" LCD console with CAT5 KVM into Cabinet	33
3.2.1 Notes	33
3.2.2 Hardware Kits Contents	33

3.2.3	Install Console Steps	34
3.3	Installing the Video Card and Video Driver	36
3.3.1	Configuring the Display Settings	36
4.	KVM SWITCH.....	37
4.1	Introduction	37
4.2	Feature	37
4.3	Technical Specifications	39
4.4	System Requirements.....	41
4.5	Cable Diagrams	42
4.6	Product Details	43
4.7	Hardware Installation.....	45
4.7.1	Computer / Server Installation.....	45
4.7.2	Optional Remote Console Installation.....	47
4.7.2.1	IP Module.....	47
4.7.2.2	CAT5 Module.....	48
4.7.3	When video signal is foggy or unclear	48
4.7.4	Daisy Chain Connection	49
4.7.5	Turning on the Console.....	49
4.7.6	Testing the Console	50
4.8	Hotkey.....	51
4.9	OSD (On Screen Display).....	53
4.9.1	Login Window	54
4.9.2	Port Name.....	55
4.9.3	Main Menu	56
4.9.3.1	LANGUAGE	56
4.9.3.2	PORT NAME EDIT	57
4.9.3.3	PORT SEARCH	58
4.9.3.4	USER SECURITY	58
4.9.3.5	ACCESS LIST.....	59
4.9.3.6	HOTKEY	60
4.9.3.7	TIME SETTINGS	61
4.9.3.8	OSD MOUSE	61

1. General Information

1.1 Overview

The KVM console is an ideal solution for network administration with multiple servers / platforms. Their 15 / 17 / 17.3 / 19 / 20.1-inch large size TFT LCD color display and ultra-low-profile compact industrial keyboard / touchpad provide the user-friendliest and most reliable environment for network administrators. All these functions are integrated in a 19-inch 1U space with rugged construction design to achieve ultra space saving and high reliability for high quality industrial network applications.

The KVM console provide superior picture quality and state-of-the-art features mounted in an industrial grade, rack mount console. The console forms a rugged enclosure that protects the panel from industrial hazards and permits easy access to panel controls.

The KVM console panels provide flicker-free color images at optimal resolutions. The panels' 0.297 x 0.297 mm pixel pitch – 15 inch (0.264 x 0.264 mm pixel pitch – 17 inch, 0.1989 x 0.1989 mm pixel pitch – 17.3 inch, 0.098 x 0.294 mm pixel pitch – 19 inch, 0.255 x 0.255mm pixel pitch – 20.1 inch) ensures crisp images with clear definition, even at high resolutions. The KVM console panels are intelligent, microprocessor-based, and have an ergonomically designed display. The KVM console panels employ the latest in active matrix thin film transistor (TFT) technology, providing crisp screen images and wide viewing angles. Unlike CRT panels, LCD panels are inherently immune to the magnetic fields commonly found on the plant floor or communications centers. LCDs are also typically brighter than conventional CRT technology, making them ideal for the high ambient lighting conditions found in many of today's factory environments. On-screen menus allow for display adjustments. In addition, the panels' Plug-n-Play+ features support Dos, Unix, Linux, OSX, Windows, while a universal power supply ensures global applicability.

The KVM console panels are compatible with most analog RGB (red, green, blue) display standards, including PS/2, optional for Sun Micro System, Apple Macintosh Centris, Quadra, and Macintosh II family signals. The LCD panel is capable of displaying crisp and vibrant color graphics with VGA, SXGA, XGA (non-interlaced), SXGA, UXGA, and most Macintosh compatible color video cards.

1.2 Product Specification

1.2.1 15" LCD console with CAT5 KVM Specification

Model name	15" LCD console with 8-port CAT5 KVM	
Number of ports	8	
Dimension	590 .8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	12 kg / 26.5 lbs	
Display Size	15 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1024 x 768 (XGA)	
Pixel Pitch	Supports 0.297 mm x 0.297 mm	
Viewing Angle (CR>10)	Right-Left View 130°(Typ) Up-Down View 100°(Typ)	
Contrast Ratio	550:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16M Colors (6-bit with FRC)	
Response Time	Rising Time 2 ms, Decay Time 6 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	8 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	10.12W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-1. 15" LCD console with CAT5 KVM Specification

Model name	15" LCD console with 16-port CAT5 KVM	
Number of ports	16	
Dimension	590 .8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	12 kg / 26.5 lbs	
Display Size	15 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1024 x 768 (XGA)	
Pixel Pitch	Supports 0.297 mm x 0.297 mm	
Viewing Angle (CR>10)	Right-Left View 130°(Typ) Up-Down View 100°(Typ)	
Contrast Ratio	550:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16M Colors (6-bit with FRC)	
Response Time	Rising Time 2 ms, Decay Time 6 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	16 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	10.12W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~122°F	
	Storage -20 ~ 60°C / -4 ~140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-2. 15" LCD console with CAT5 KVM Specification

Model name	15" LCD console with 32-port CAT5 KVM	
Number of ports	32	
Dimension	590 .8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	12 kg / 26.5 lbs	
Display Size	15 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1024 x 768 (XGA)	
Pixel Pitch	Supports 0.297 mm x 0.297 mm	
Viewing Angle (CR>10)	Right-Left View 130°(Typ) Up-Down View 100°(Typ)	
Contrast Ratio	550:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16M Colors (6-bit with FRC)	
Response Time	Rising Time 2 ms, Decay Time 6 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	32 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	10.12W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~122°F	
	Storage -20 ~ 60°C / -4 ~140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-3. 15" LCD console with CAT5 KVM Specification

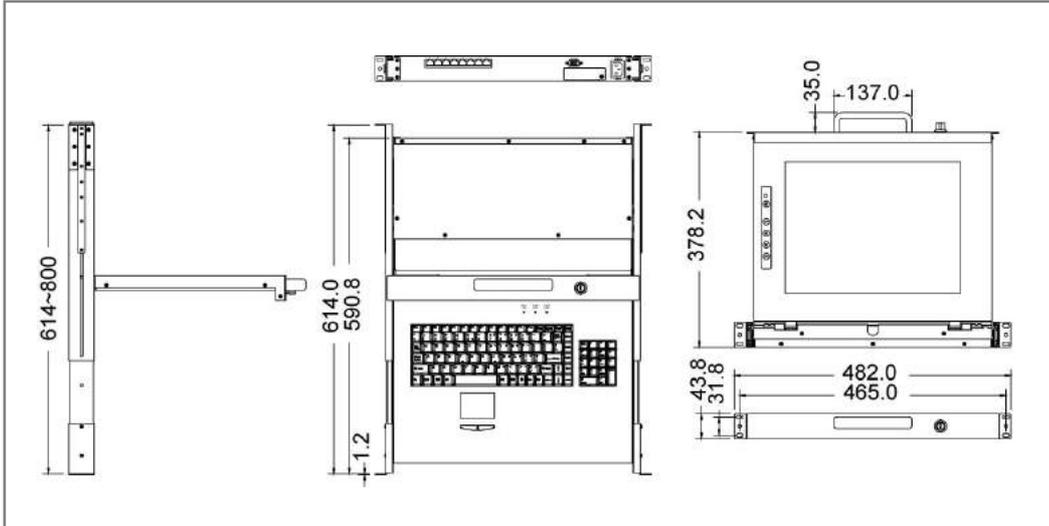


Figure 1-1. 15" LCD console with 8-port CAT5 KVM Dimension

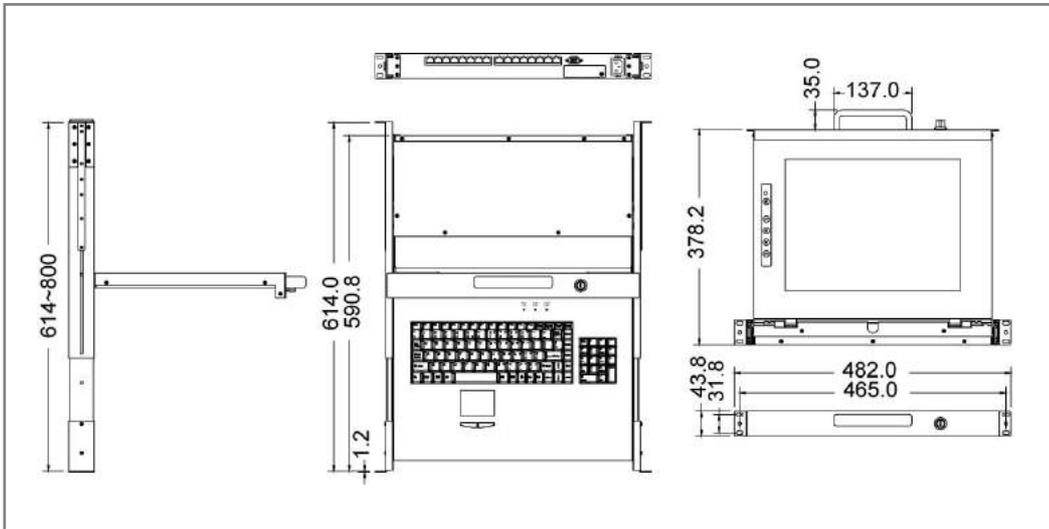


Figure 1-2. 15" LCD console with 16-port CAT5 KVM Dimension

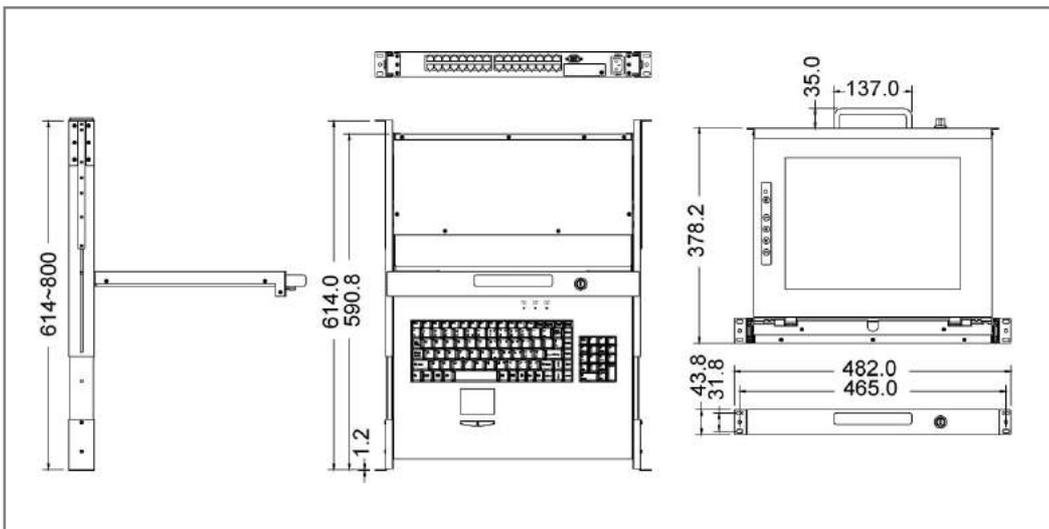


Figure 1-3. 15" LCD console with 32-port CAT5 KVM Dimension

1.2.2 17" LCD console with CAT5 KVM Specification

Model name	17" LCD console with 8-port CAT5 KVM	
Number of ports	8	
Dimension	590.8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	13 Kg / 28.7 lbs	
Display Size	17 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1280 x 1024 (SXGA)	
Pixel Pitch	Supports 0.264 mm x 0.264 mm	
Viewing Angle (CR>10)	Right-Left View 170°(Typ) Up-Down View 160°(Typ)	
Contrast Ratio	1000:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 3.8 ms, Decay Time 1.2 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	8 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	9.91W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-4. 17" LCD console with CAT5 KVM Specification

Model name	17" LCD console with 16-port CAT5 KVM	
Number of ports	16	
Dimension	590.8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	13 Kg / 28.7 lbs	
Display Size	17 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1280 x 1024 (SXGA)	
Pixel Pitch	Supports 0.264 mm x 0.264 mm	
Viewing Angle (CR>10)	Right-Left View 170°(Typ) Up-Down View 160°(Typ)	
Contrast Ratio	1000:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 3.8 ms, Decay Time 1.2 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	16 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	9.91W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-5. 17" LCD console with CAT5 KVM Specification

Model name	17" LCD console with 32-port CAT5 KVM	
Number of ports	32	
Dimension	590.8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	13 Kg / 28.7 lbs	
Display Size	17 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1280 x 1024 (SXGA)	
Pixel Pitch	Supports 0.264 mm x 0.264 mm	
Viewing Angle (CR>10)	Right-Left View 170°(Typ) Up-Down View 160°(Typ)	
Contrast Ratio	1000:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 3.8 ms, Decay Time 1.2 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	32 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	9.91W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-6. 17" LCD console with CAT5 KVM Specification

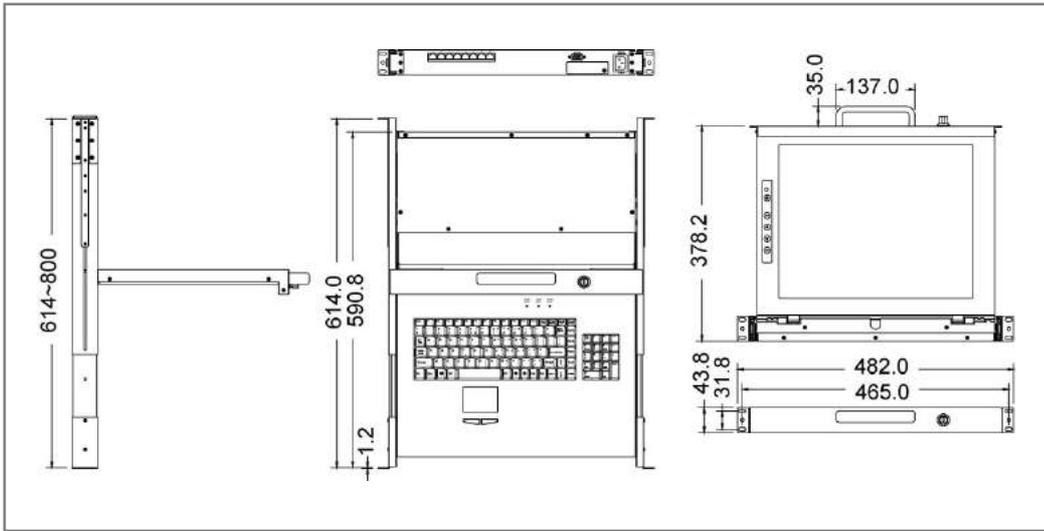


Figure 1-4. 17" LCD console with 8-port CAT5 KVM Dimension

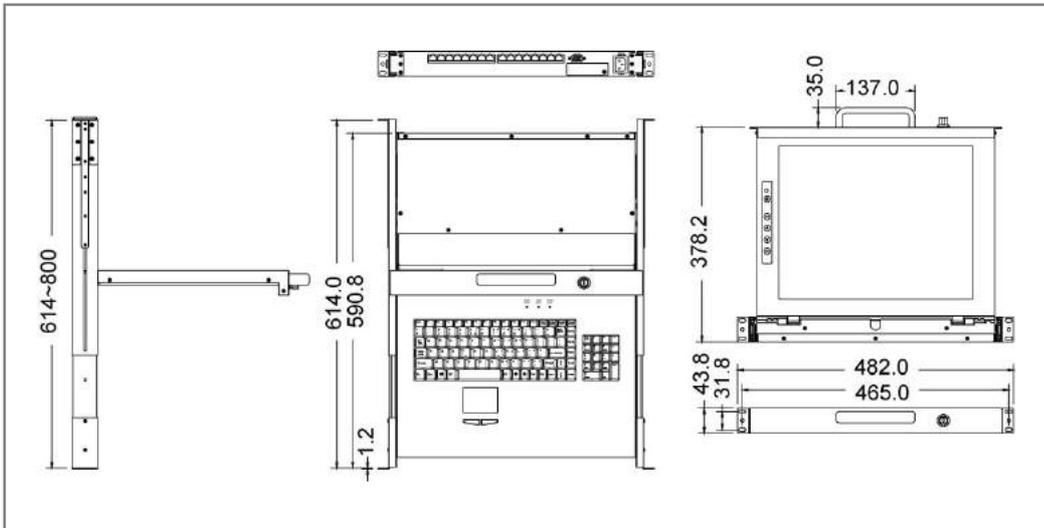


Figure 1-5. 17" LCD console with 16-port CAT5 KVM Dimension

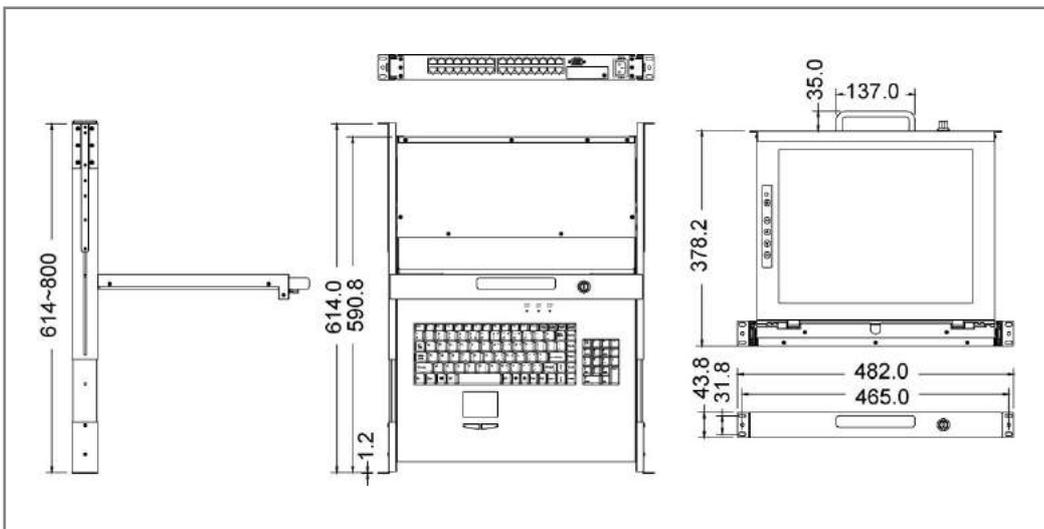


Figure 1-6. 17" LCD console with 32-port CAT5 KVM Dimension

1.2.3 17" Full HD LCD console with CAT5 KVM Specification

Model name	17" Full HD LCD console with 8-port CAT5 KVM	
Number of ports	8	
Dimension	590.8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	13 Kg / 28.7 lbs	
Display Size	17.3 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1920 x 1080 (Full HD)	
Pixel Pitch	Supports 0.1989 mm x 0.264 mm	
Viewing Angle (CR>10)	Right-Left View 140°(Typ) Up-Down View 120°(Typ)	
Contrast Ratio	650:1	
Brightness	White 300 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 2 ms, Decay Time 6 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	8 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	8.3W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-7. 17" Full HD LCD console with CAT5 KVM Specification

Model name	17" Full HD LCD console with 16-port CAT5 KVM	
Number of ports	16	
Dimension	590.8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	13 Kg / 28.7 lbs	
Display Size	17 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1920 x 1080 (Full HD)	
Pixel Pitch	Supports 0.1989 mm x 0.1989 mm	
Viewing Angle (CR>10)	Right-Left View 140°(Typ) Up-Down View 120°(Typ)	
Contrast Ratio	650:1	
Brightness	White 300 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 2 ms, Decay Time 6 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	16 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	8.3W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-5. 17" Full HD LCD console with CAT5 KVM Specification

Model name	17" Full HD LCD console with 32-port CAT5 KVM	
Number of ports	32	
Dimension	590.8 x 482 x 44 mm / 23.3 x 19 x 1.7 inches	
Net Weight	13 Kg / 28.7 lbs	
Display Size	17 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1920 x 1080 (Full HD)	
Pixel Pitch	Supports 0.1989 mm x 0.1989 mm	
Viewing Angle (CR>10)	Right-Left View 140°(Typ) Up-Down View 120°(Typ)	
Contrast Ratio	650:1	
Brightness	White 300 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 2 ms, Decay Time 6 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	32 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	8.3W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-6. 17" Full HD LCD console with CAT5 KVM Specification

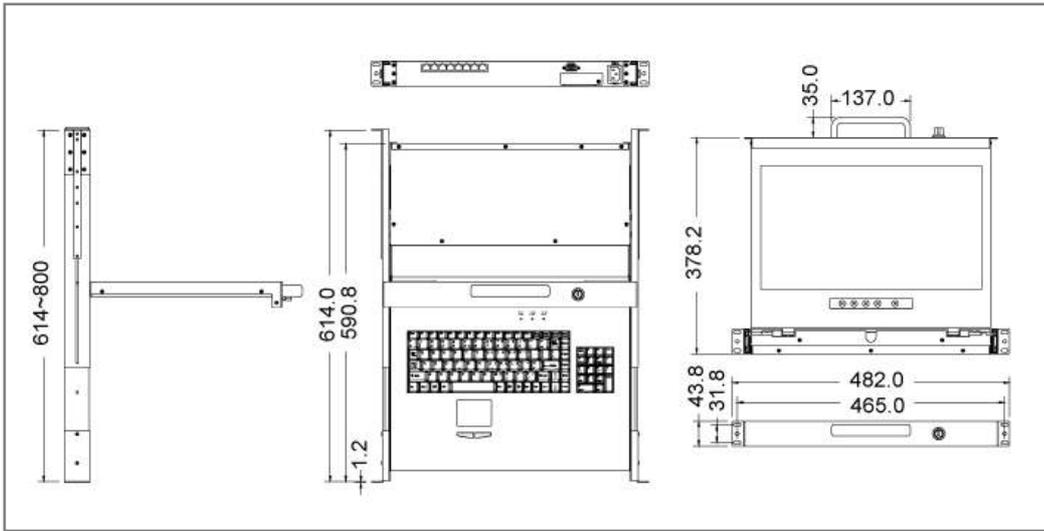


Figure 1-4. 17" Full HD LCD console with 8-port CAT5 KVM Dimension

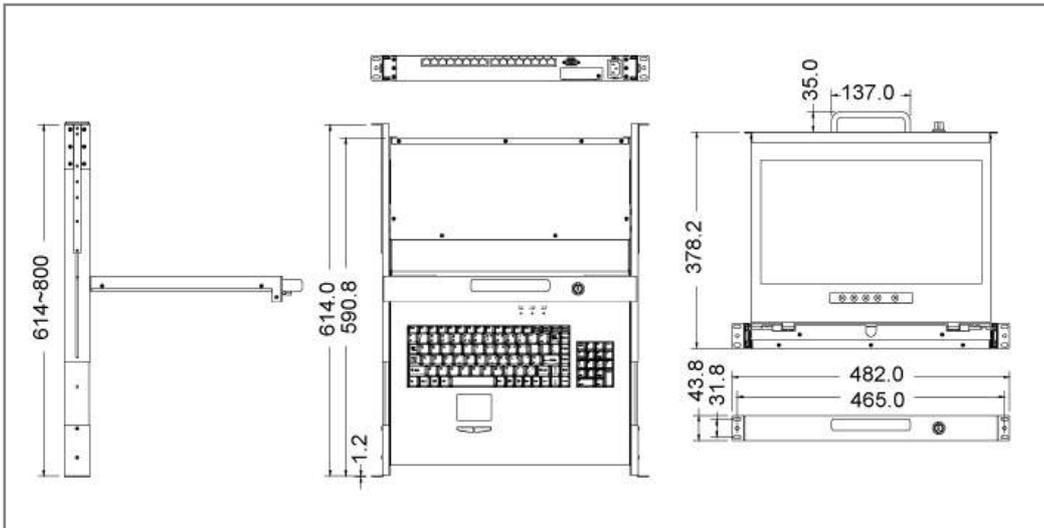


Figure 1-5. 17" Full HD LCD console with 16-port CAT5 KVM Dimension

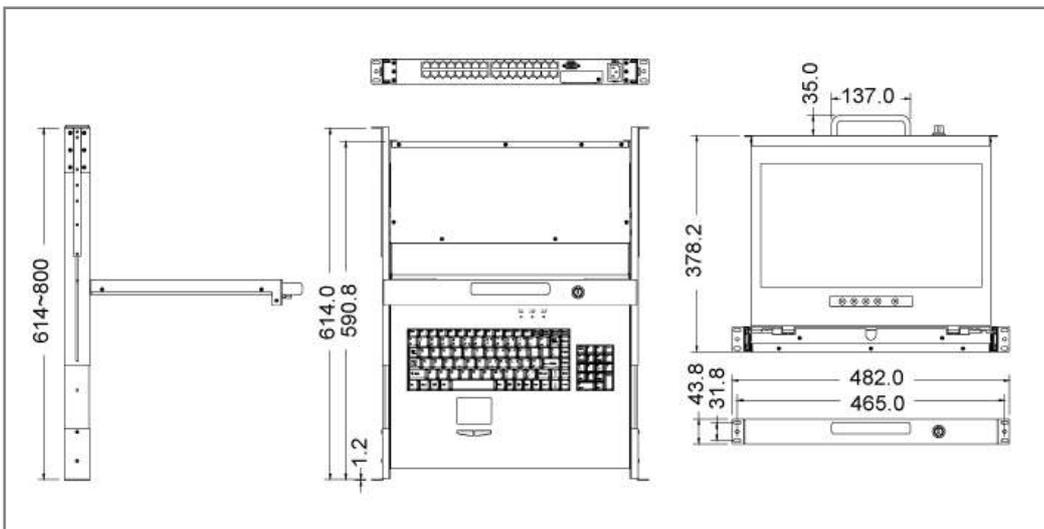


Figure 1-6. 17" Full HD LCD console with 32-port CAT5 KVM Dimension

1.2.3 19" LCD console with CAT5 KVM Specification

Model name	19" LCD console with 8-port CAT5 KVM	
Number of ports	8	
Dimension	640.8 x 482 x 44 mm / 25.2 x 19 x 1.7 inches	
Net Weight	14 Kg / 30.9 lbs	
Display Size	19 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1280 x 1024 (SXGA)	
Pixel Pitch	Supports 0.098 mm x 0.294 mm	
Viewing Angle (CR>10)	Right-Left View 170°(Typ) Up-Down View 160°(Typ)	
Contrast Ratio	1000:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 3.6 ms, Decay Time 1.4 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	8 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	11.03W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-7. 19" LCD console with CAT5 KVM Specification

Model name	19" LCD console with 16-port CAT5 KVM	
Number of ports	16	
Dimension	640.8 x 482 x 44 mm / 25.2 x 19 x 1.7 inches	
Net Weight	14 Kg / 30.9 lbs	
Display Size	19 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1280 x 1024 (SXGA)	
Pixel Pitch	Supports 0.098 mm x 0.294 mm	
Viewing Angle (CR>10)	Right-Left View 170°(Typ) Up-Down View 160°(Typ)	
Contrast Ratio	1000:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 3.6 ms, Decay Time 1.4 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	16 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	11.03W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-8. 19" LCD console with CAT5 KVM Specification

Model name	19" LCD console with 32-port CAT5 KVM	
Number of ports	32	
Dimension	640.8 x 482 x 44 mm / 25.2 x 19 x 1.7 inches	
Net Weight	14 Kg / 30.9 lbs	
Display Size	19 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1280 x 1024 (SXGA)	
Pixel Pitch	Supports 0.098 mm x 0.294 mm	
Viewing Angle (CR>10)	Right-Left View 170°(Typ) Up-Down View 160°(Typ)	
Contrast Ratio	1000:1	
Brightness	White 250 cd/m ² (Center 1 point Typ)	
Back Light	Dual Lamps for Back Light	
Supported Colors	16.7M Colors (6-bit with FRC)	
Response Time	Rising Time 3.6 ms, Decay Time 1.4 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	32 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	11.03W for Panel	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-9. 19" LCD console with CAT5 KVM Specification

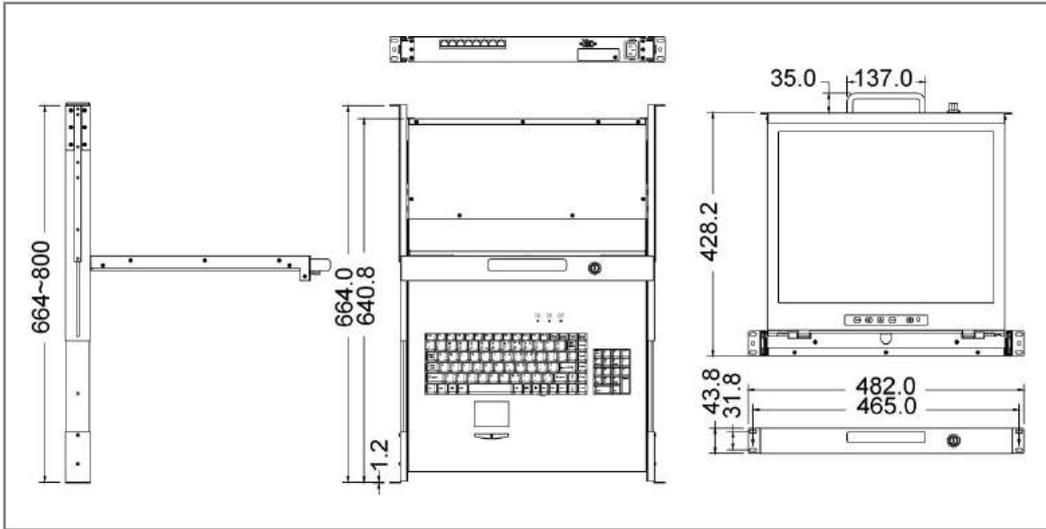


Figure 1-7. 19" LCD console with 8-port CAT5 KVM Dimension

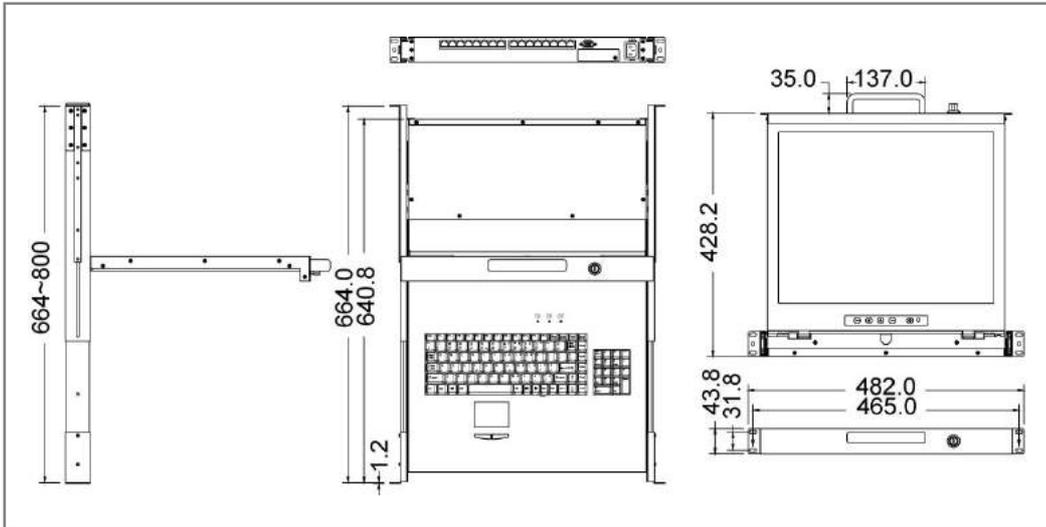


Figure 1-8. 19" LCD console with 16-port CAT5 KVM Dimension

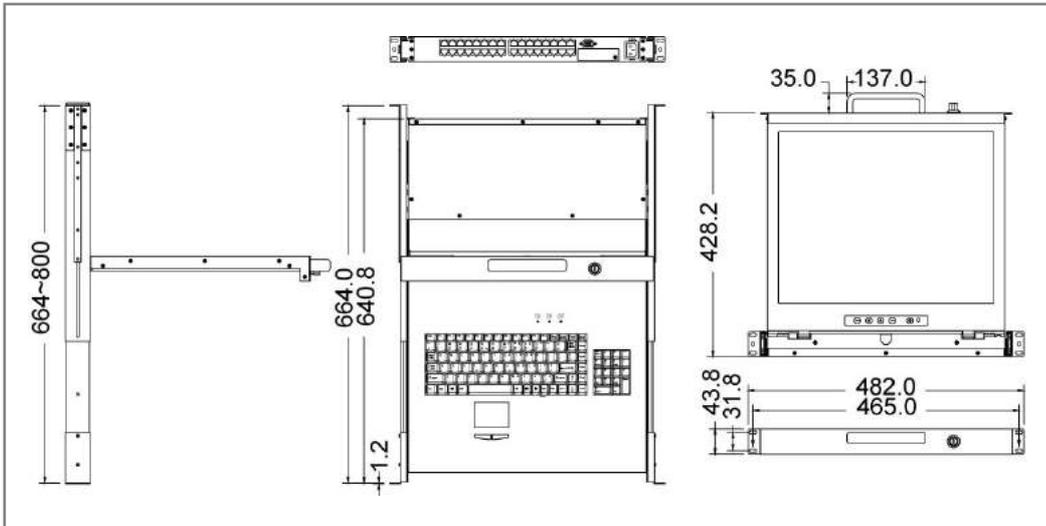


Figure 1-9. 19" LCD console with 32-port CAT5 KVM Dimension

1.2.4 20" LCD console with CAT5 KVM Specification

Model name	20" LCD console with 8-port CAT5 KVM	
Number of ports	8	
Dimension	639.6 x 482 x 43.8 mm / 25.2 x 19 x 1.7 inches	
Net Weight	18 Kg / 39.7 lbs	
Display Size	20.1 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1600 x 1200 (UXGA)	
Pixel Pitch	Supports 0.255 mm x 0.255 mm	
Active Display	Horizontal: 408.0 mm, Vertical: 306.0 mm	
Viewing Angle (CR>10)	Right-Left view 178°(Typ) Up-Down View 178°(Typ)	
Contrast Ratio	700 : 1	
Brightness	White 300 cd/m ²	
Back Light	Six Lamps for Back Light	
Supported Colors	16.7M Colors (8-bit with FRC)	
Response Time	Rising Time 7 ms, Decay Time 9 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	8 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	35W	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-10. 20" LCD console with CAT5 KVM Specification

Model name	20" LCD console with 16-port CAT5 KVM	
Number of ports	16	
Dimension	639.6 x 482 x 43.8 mm / 25.2 x 19 x 1.7 inches	
Net Weight	18 Kg / 39.7 lbs	
Display Size	20.1 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1600 x 1200 (UXGA)	
Pixel Pitch	Supports 0.255 mm x 0.255 mm	
Active Display	Horizontal: 408.0 mm, Vertical: 306.0 mm	
Viewing Angle (CR>10)	Right-Left view 178°(Typ) Up-Down View 178°(Typ)	
Contrast Ratio	700 : 1	
Brightness	White 300 cd/m ²	
Back Light	Six Lamps for Back Light	
Supported Colors	16.7M Colors (8-bit with FRC)	
Response Time	Rising Time 7 ms, Decay Time 9 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	16 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	35W	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-11. 20" LCD console with CAT5 KVM Specification

Model name	20" LCD console with 32-port CAT5 KVM	
Number of ports	32	
Dimension	639.6 x 482 x 43.8 mm / 25.2 x 19 x 1.7 inches	
Net Weight	18 Kg / 39.7 lbs	
Display Size	20.1 inches	
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1600 x 1200 (UXGA)	
Pixel Pitch	Supports 0.255 mm x 0.255 mm	
Active Display	Horizontal: 408.0 mm, Vertical: 306.0 mm	
Viewing Angle (CR>10)	Right-Left view 178°(Typ) Up-Down View 178°(Typ)	
Contrast Ratio	700 : 1	
Brightness	White 300 cd/m ²	
Back Light	Six Lamps for Back Light	
Supported Colors	16.7M Colors (8-bit with FRC)	
Response Time	Rising Time 7 ms, Decay Time 9 ms	
Operating System	Dos, Microsoft Windows, Netware, Unix, Linux, MAC, SUN	
Connectors	PC Port Connectors	16 x RJ-45
	Daisy Chain Connector	1 x HDDB 15-pin
	Power Connector	1 x AC Inlet
Signal Cable	CAT5 / 5E / 6 cable with dongles (optional)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45 ~ 80 KHz	
Power Source	100 ~ 240 VAC input	
Power Consumption	35W	
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F	
	Storage -20 ~ 60°C / -4 ~ 140°F	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy duty steel materials	
Keyboard Language	US, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Hebrew, Norwegian, Danish, Japanese, Mandarin, Russian, Arabic	

Table 1-12. 20" LCD console with CAT5 KVM Specification

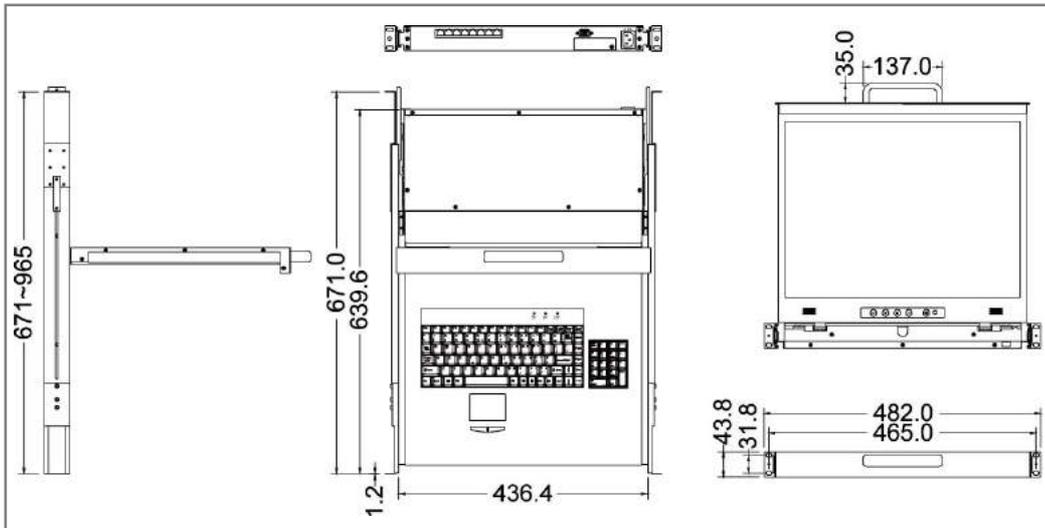


Figure 1-10. 20" LCD console with 8-port CAT5 KVM Dimension

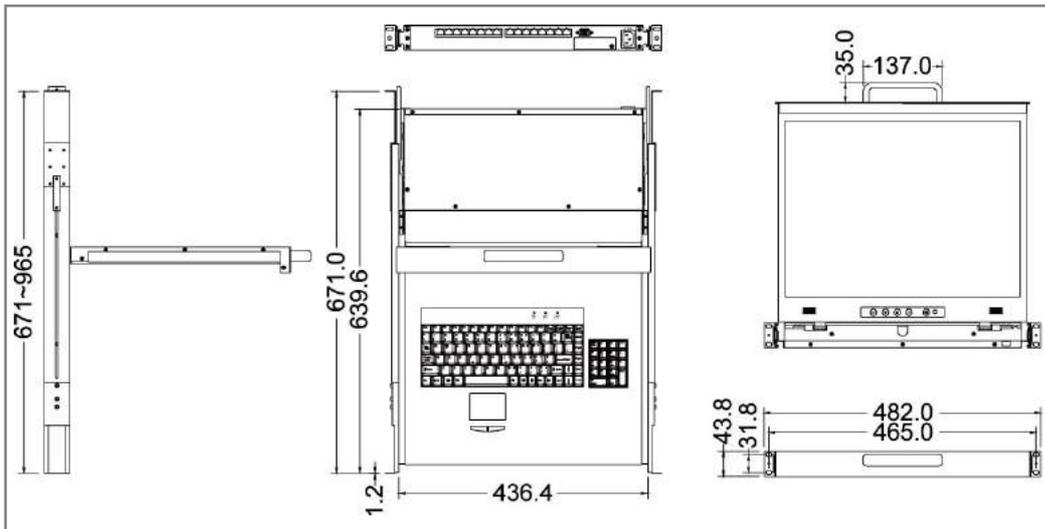


Figure 1-11. 20" LCD console with 16-port CAT5 KVM Dimension

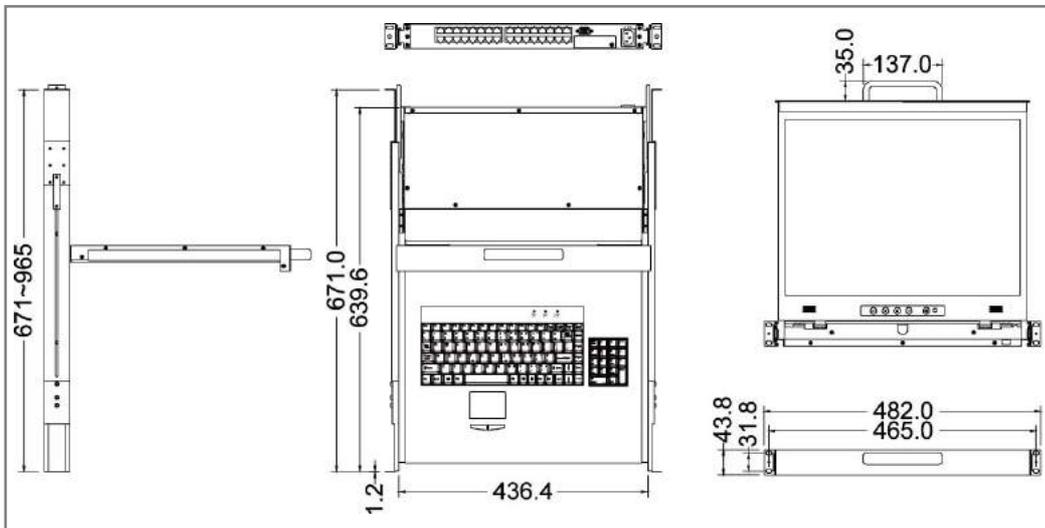


Figure 1-12. 20" LCD console with 32-port CAT5 KVM Dimension

2. Panel Controls and OSD Function

Controls	Description
	Soft power on / off button. Adjacent LED is lit when on.
Auto	Auto-synchronize and scale down display to any valid factory preset timings.
	Press to scroll the function you want to adjust.
	Press to scroll the function you want to adjust.
Menu	To access the main menu. This button also acts as the “Enter” button.

Table 2-1. Panel Controls

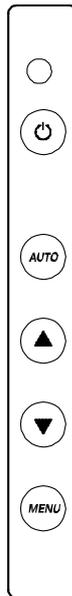


Figure 2-1. 15" / 17" LCD console OSD Control Bar



Figure 2-2. 17" Full HD / 19" / 20" LCD console OSD Control Bar

2.1 Auto Tune

Press the “auto tune” button. The panel will adjust the display size automatically and also tune the panel to its best condition.

2.2 Input Source

1. Press the “menu” button.
2. Use the “Down” and “Up” button to scroll.

Auto tune.

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the “menu” button to enter, and you will see:

VGA / DVI

4. Use the “Down” and “Up” button to select the input source of signal.
5. Press the “menu” button to enter

2.3 Brightness

1. Press the “menu” button.
2. Use the “Down” and “Up” button to scroll.

Auto tune.

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the “menu” button to enter.
4. Use the “Down” and “Up” button to adjust the brightness of the display.
5. Press the “menu” button to enter.

2.4 Contrast

1. Press the “menu” button.
2. Use the “Down” and “Up” button to scroll.

Auto tune.

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

1. Press the “menu” button to enter.
2. Use the “Down” and “Up” button to adjust the contrast of the display.
3. Press the “menu” button to enter.

2.5 Color

1. Press the “menu” button.
2. Use the “Down” and “Up” button to scroll.

Auto tune.

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the “menu” button to enter. And you will see:

Icon	Description
9300°K	To set CIE coordinates at 9300°K color
7500°K	To set CIE coordinates at 7500°K color
6500°K	To set CIE coordinates at 6500°K color
User	To set user defined CIE
Auto color	To auto adjust color
Return	To exit and return to the previous page

Table 2-2. Icon Description

4. Use the “Down” and “Up” button to adjust the color of the display.

5. Press “menu” to enter.

2.6 Position

1. Press the “menu” button.

2. Use the “Down” and “Up” button to scroll.

Auto tune.

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the “menu” button to enter. And you will see:

Icon	Description
Image Pos	To adjust the position of the image.
OSD Pos	To adjust the position of the OSD.
Return	To exit and return to the previous page

Table 2-3. Icon Description

4. Use the “Down” and “Up” button to scroll.
5. Press the “menu” button to enter.

2.7 Language

1. Press the “menu” button.
2. Use the “Down” and “Up” button to scroll.

Auto tune.

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the “menu” button to enter. And you will see:

English

German

French

Italian

Spanish

4. Use the “Down” and “Up” button to scroll.
5. Press the “menu” button to enter.

2.8 Recall

1. Press the “menu” button.
2. Use the “Down” and “Up” button to scroll.

Auto tune.
Input Source
Brightness
Contrast
Color
Position
Language

Recall

Exit

3. Press the “menu” button to enter, and you will see:

Yes/ No

4. Select “Yes” button then ‘Menu” button to recall the factory setting.
Select “No “ to return to the previous page.

2.9 Exit

Press the “exit” button to quit OSD menu.

2.10 Power Indicator

- ◆ GREEN ON
- ◆ RED STANDBY
- ◆ RED SUSPEND
- ◆ RED OFF



OSD – On Screen Display

3. Installation

3.1 Install single rail 15" / 17" / 17" Full HD / 19" LCD console with CAT5 KVM into Cabinet

3.1.1 Notes

1. Please check all peripherals according the list before installation. To make sure that the whole unit was not damaged and lost during shipping process. If you encounter any problem, please contact your dealer.
2. Before installation, make sure all peripherals and computer have been turned off.
- 3.


Model name	The cabinet depth range
15" / 17" / 17" Full HD	614 ~ 1000 mm
19"	664 ~1000 mm

Contact your dealer for deeper cabinet application.


4. Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit.

3.1.2 Hardware Kits Contents

1. Rail with front and rear bracket x 2. (Please identify the brackets. Right and left sides are different. 15"and 17" for rack depth 614 ~ 828 mm, 19" for rack depth 664 ~ 828 mm)

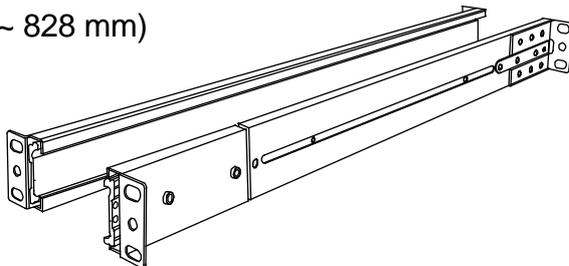

2. Long bracket x 2. (Needed for rack depth 828 ~ 1000mm)

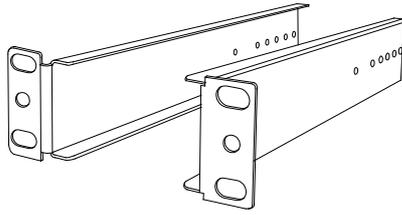


3. Flat screw x 6 (for rail mount to console body)



4. Screw x 6




5. Key x 2

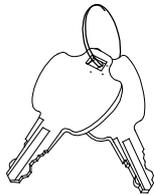


3.1.3 Installation Steps


1. Loose (Not release) four rear screws then adjust rear bracket to fit your cabinet.

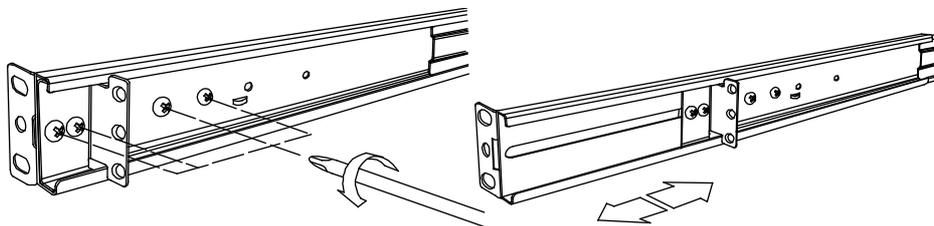


2. Install front and rear bracket on cabinet.

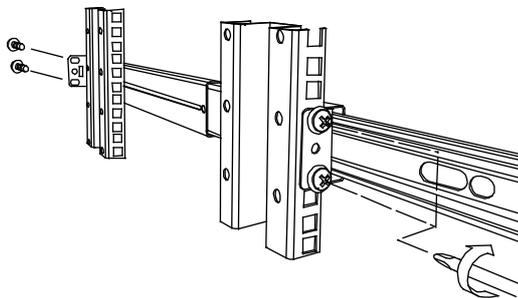


3. Tight-up four rear screws.

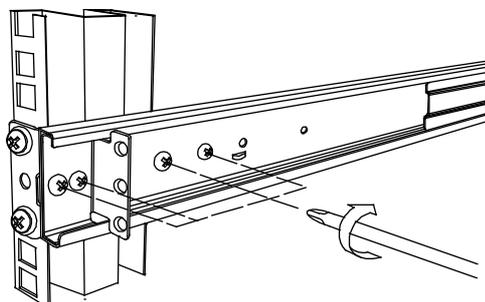

4. Repeat step 1~3 for the other side.
5. Push console into left and right rails. (Be careful when takeout console.)

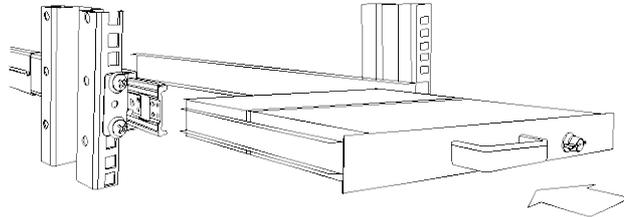



6. Unlock and pull rail-lock switch (left and right at the same time) then push console to the end.

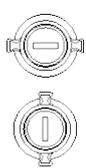

lock




unlock

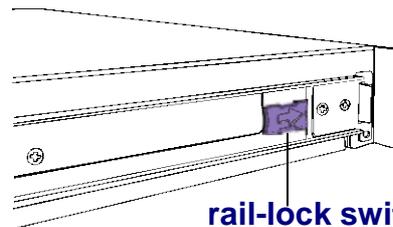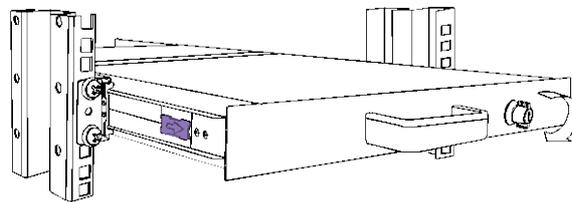


rail-lock switch

7. Install three screws in rear of the console. (Both sides)

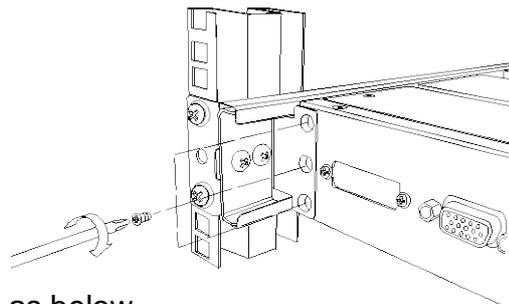


8. Finish installation as below.

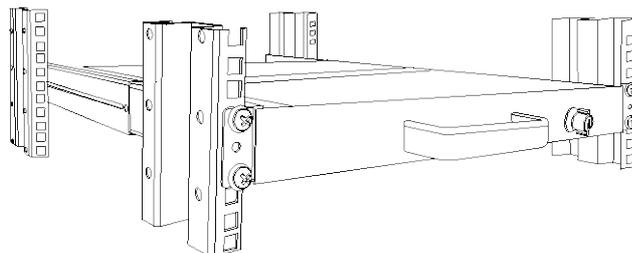


3.1.4 Replace Longer Bracket Steps (For rack depth 828~1000mm)


1. Release six screws.

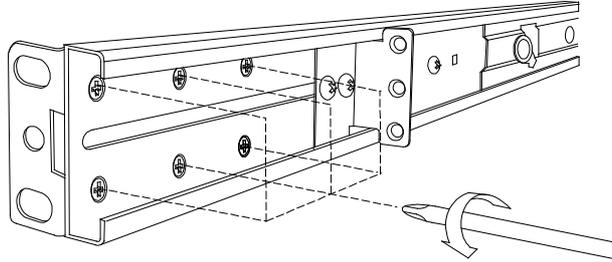

2. Take rear bracket out.

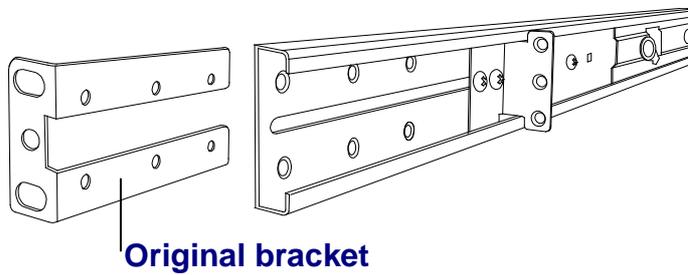


- 2 Input rear long bracket to rear of the rail then adjust rear bracket to fit your cabinet. Tight-up 2~3 screws upon the length you need. One is forbidden.

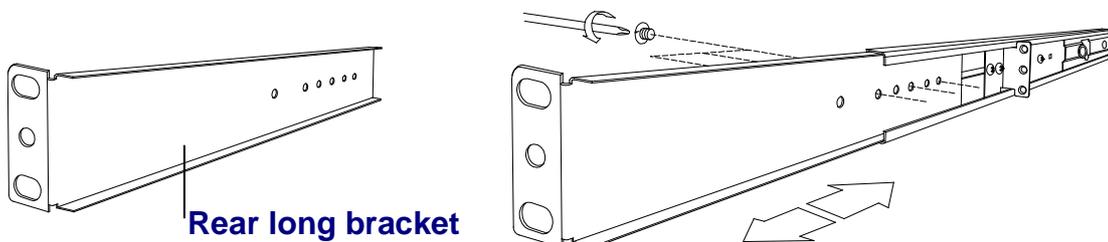


4. Repeat step 1~3 for the other side.
5. Repeat 3.1.3 step to install console.

3.1.5 Unload Steps


1. Make sure the console is lock.
2. Release three screws in rear of the console. (Both sides)

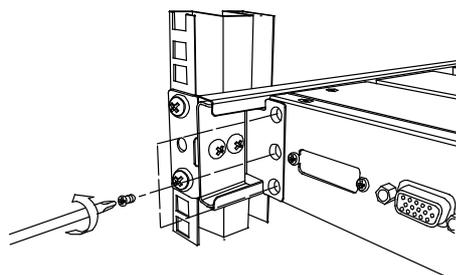


3. Unlock.

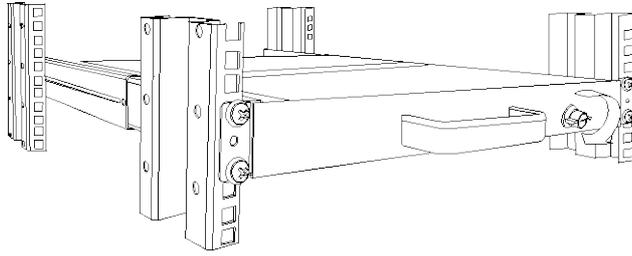


4. Pull console out until console lock.

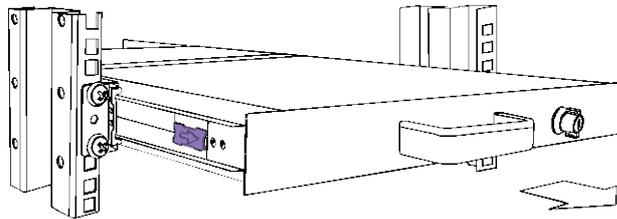

5. Pull rail-release switch and pull console out.(Both sides. Be careful when pull out console.)

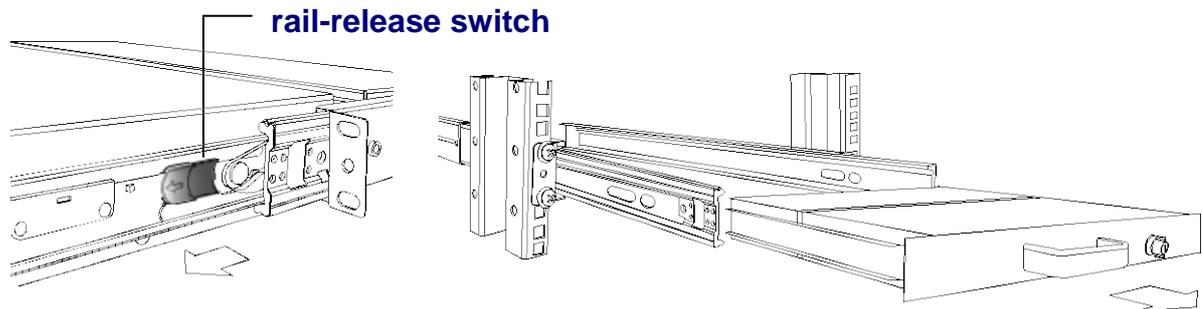

6. Push rail-lock switch on the rail and push rail back.(Both sides)

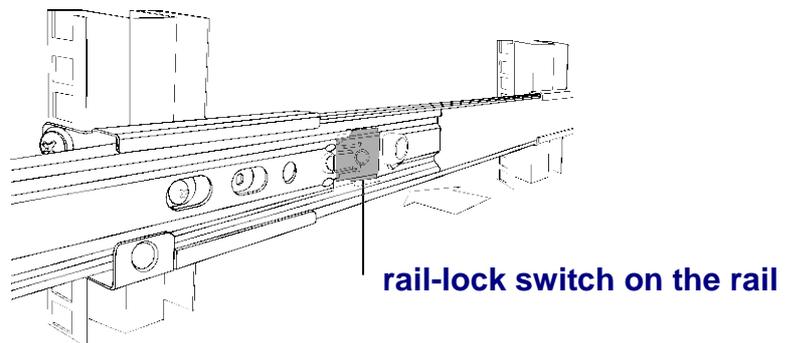


3.2 Install single rail 20" LCD console into Cabinet

3.2.1 Notes

1. Please check all peripherals according the list before installation. To make sure that the whole unit was not damaged and lost during shipping process. If you encounter any problem, please contact your dealer.
2. Before installation, make sure all peripherals and computer have been turned off.
3. The cabinet depth range must be in 671 ~ 965 mm.
Contact your dealer for deeper cabinet application.
4. Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit.

3.2.2 Hardware Kits Contents

1. Rail with front and rear bracket x 2

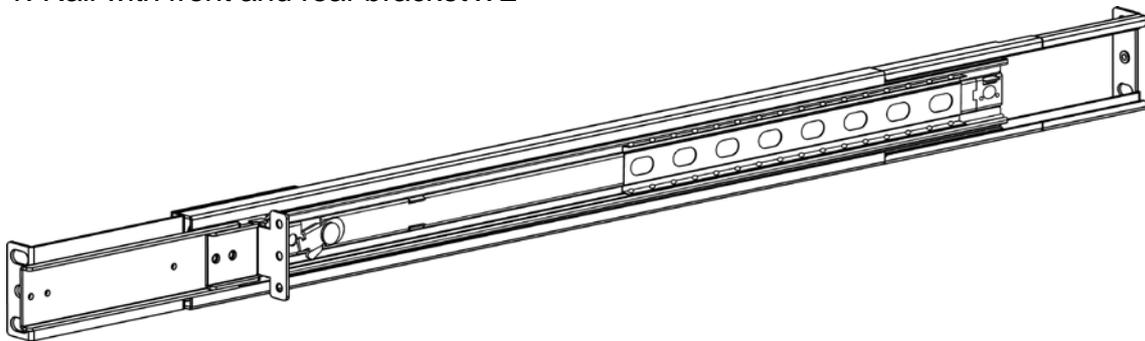

2. Screw (length = 6 mm) x 6




3. Key x 2




3.2.3 Install Console Steps


1. Adjust rail until two screws appear. Loose (Not release) two rear screws then adjust rear bracket to fit your cabinet.

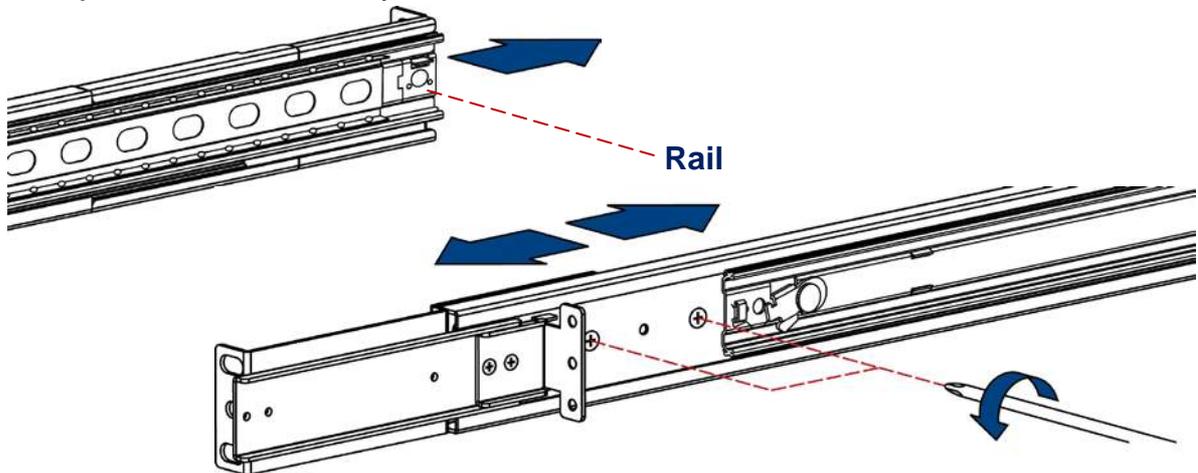

2. Install front and rear bracket on cabinet.

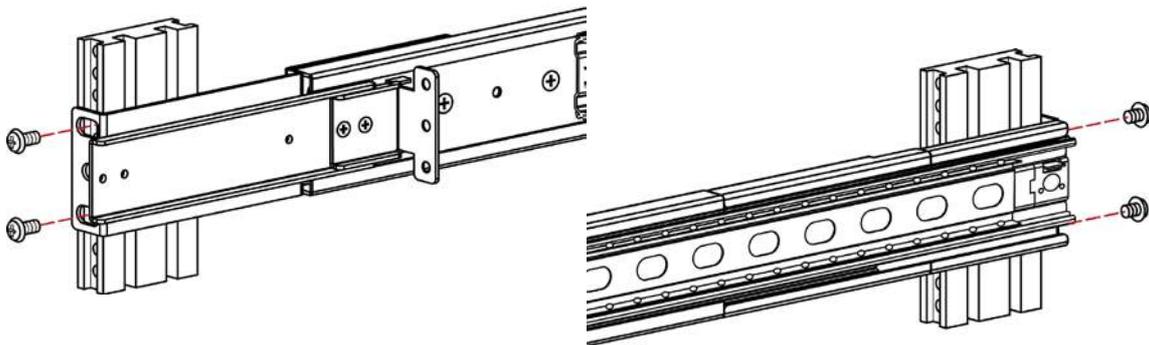


3. Tight-up two rear screws.

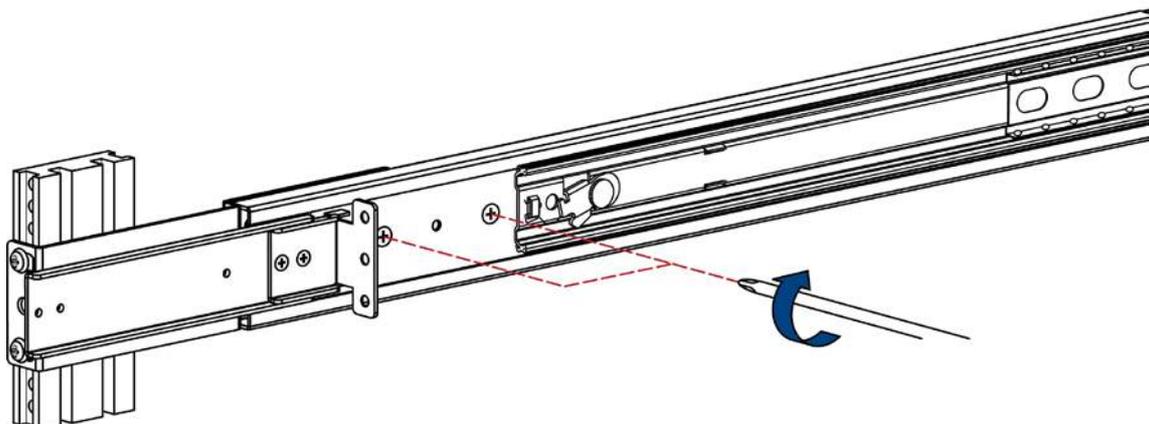


4. Repeat step 1~3 for the other side.
5. Pull rail until it lock and keep the part A in front of the rail (Both sides). Then push console into left and right rails. (Be careful rear box loose when take out)


console from carton.)

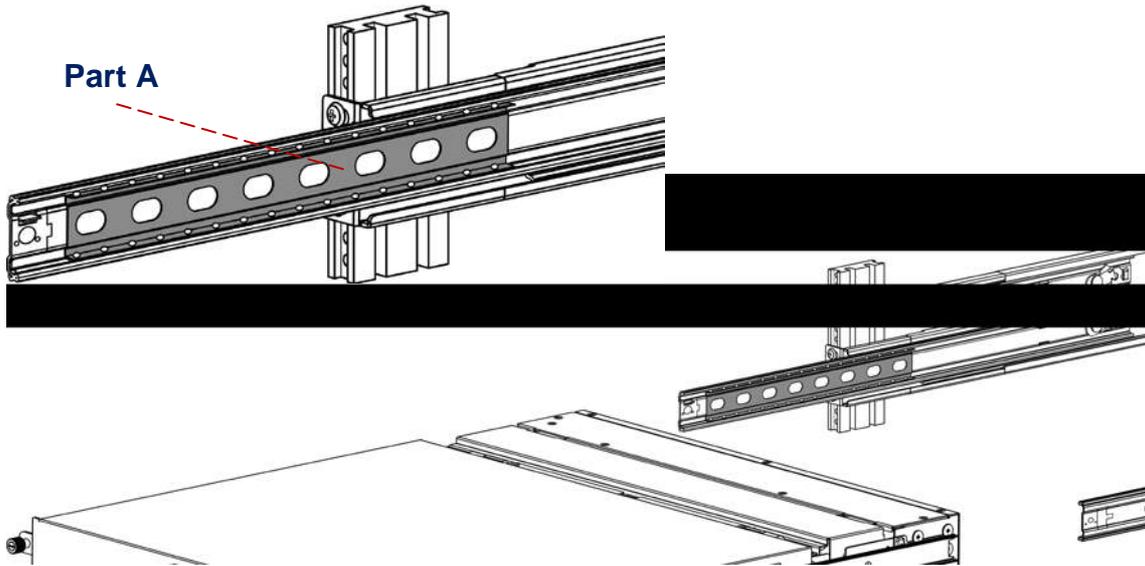


6. Pull rail-release switch (left and right at the same time) then push console to the end.

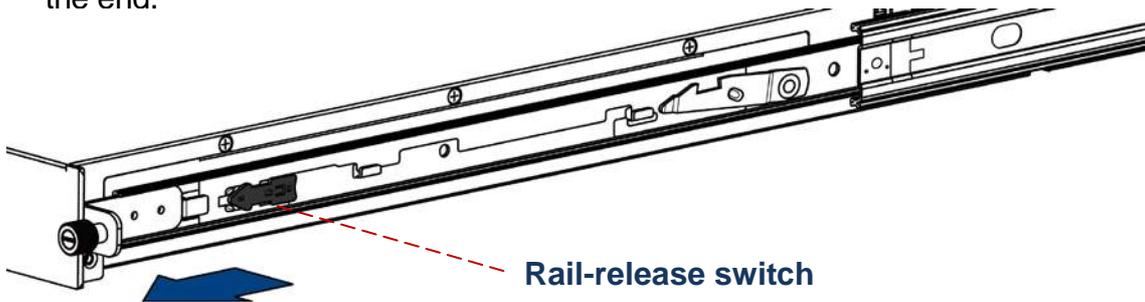

7. Install three screws in rear of the console (Both sides).

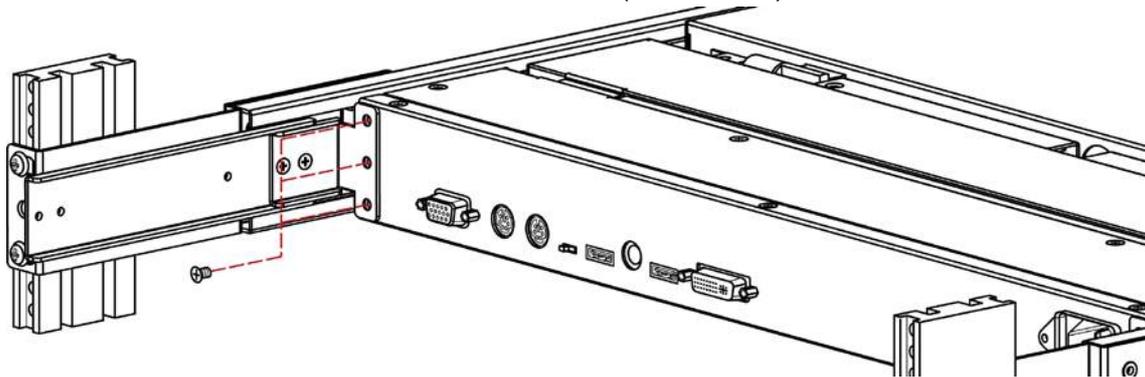

8. Finish installation as below.

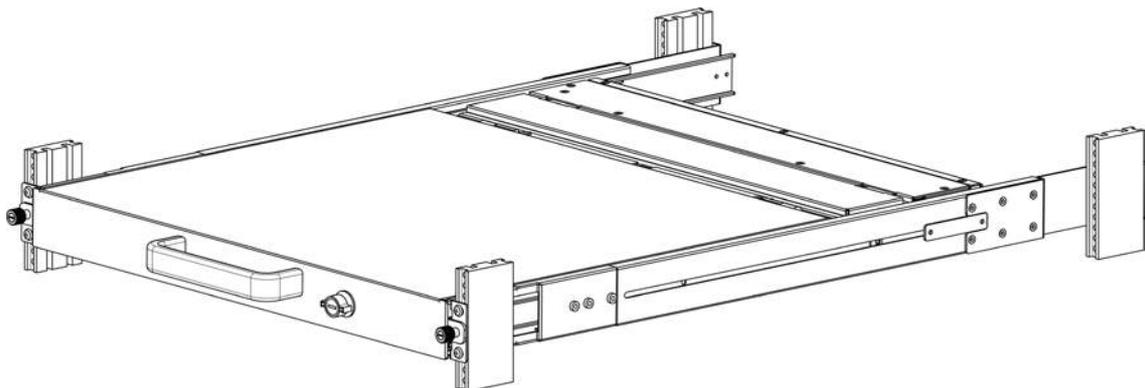

3.3 Installing the Video Card and Video Driver

Before connecting the LCD console, make sure your computer has a video card already installed for the panel. After you connect the console, install the video software driver. The video driver is supplied by the video card manufacturer and may be found on the CD-ROM that came with your computer. If you need information on installing a video card or video driver, refer to the manual that came with your video card.

3.3.1 Configuring the Display Settings

After connecting the console and turning on your computer, you may need to configure one or more of the following display settings:

- Display mode (also called desktop area or video resolution)
- Refresh rate (also called vertical scan rate or vertical sync)
- Color depth (also called color palette or number of colors)

Each video card has several controls that let you adjust the display settings. However, the software and driver for each video card is unique. In most cases, you adjust these settings by using a program or utility provided by the manufacturer of the video card. Most video cards use the Windows Display Properties control panel to configure the display. To open the Windows Display Properties, click the right mouse button in a blank area of the Windows desktop and then select **Properties**. The Settings tab usually lets you change the Color Palette and the Desktop Area (*x by y* pixel resolution).

Some video cards integrate additional features into the Windows Display Properties control panel to give you an exceptional setup that is flexible and easy to use. For example, the control panel may include an Advanced Properties button, an Adjustment tab, or a Refresh tab for changing other settings. Other video cards have a separate utility for setting display properties.

Whenever you change the resolution, color, or refresh rate, the image size, position, or shape may change. This behavior is normal. You can readjust the image using the panel on-screen controls. For more information on the panel on-screen controls, refer to Chapter 2. For more information on configuring the display settings, refer to the manual that came with your video card.

4. KVM SWITCH

4.1 Introduction

The CAT5 KVM switch can control attaching servers and computers from local or remote console. This KVM switch is loaded with features such as **one local console port, plus one optional CAT5-based remote console port or one optional IP-based remote console Port**, On Screen Display (OSD) Menu, Password security, Hot key Control, Push Button and Auto Scan Control. It has complete keyboard and mouse emulation for simultaneous PCs boot-up process.

With the CAT5-based remote console port you can you remotely control servers and computers 1000 feet away. In other words, you can locate your monitor, keyboard and mouse up to 1000 feet away from the KVM switch. The built-in CAT5 transmitter synthesizes VGA monitor and keyboard/mouse signals, and transmit the signals to the remote CAT5 receiver over the popular LAN CAT5 cable.

With the IP-based remote console port you can control one or many computers locally at the server site or remotely via the Internet using a standard browser. You can securely gain BIOS level access to systems for maintenance, support, or failure recovery over the Internet. Communication is secure via SSL encryption.

4.2 Feature

- 8 / 16 / 32 ports CAT5 KVM switch
- Support full CAT5 interface on all computer ports for reducing KVM cable bulk
- Support one local console or plus optional one remote console (CAT5 or IP)
- CAT5 console up to 1000 feet away from KVM switch with superior **auto-adjust** RGB gain / delay control capability
- Support Microsoft Windows, Netware, Unix, and Linux
- Support iMAC, Power MAC and Sun Micro Systems with USB port
- No Software Required - easy PC selection via On Screen Display (OSD) Menu, Push Buttons, Hotkeys

- Provide various Hotkey (Scroll-Lock / Cap-Lock / Num-Lock / Alt / Ctrl / Win) for switching computer port and other control functions, so Hotkey function can be used in various types of keyboards, and to avoid Hotkey duplicate problem
- Provide ACL (Access Control List) security function. Store up to 8 independent user accounts
- Hot Plug --- add or remove connected computers without powering off the LCD console or computers
- Support two layers password security protection and search PC server name
- Plug-n-Play monitor support
- Keyboard status restored when switching computers
- Support Daisy Chain function with both Bus (8-layer) and Tree (2-layer) topologies

4.3 Technical Specifications

Feature	8-port KVM	16-port KVM	32-port KVM
PC Ports	8	16	32
PC Port Connector	RJ-45		
Max. Distance (KVM switch -- Host)	40m (133 feet)		
Video Resolution (Local Console)	By LCD console panel video resolution Maximum up to 1600 x 1200		
Video Resolution (Remote Console)	1600 x 1200 for CAT5-Based 500 feet remote console (Receiver box) 1028 x 1024 for CAT5 Based 1000 feet remote console.(Receiver box Enhanced) 1600 x 1200 for IP-Based remote console		
Remote Console Ports	1 Optional Modules: CAT5-Based or IP-Based Remote Console		
CAT5 Dongle (optional)	VGA-PS/2 dongle VGA-USB dongle DVI-USB dongle HDMI-USB dongle		
CAT5-Based Remote Console Module (optional)	RJ-45 Connector CAT5 console up to 1000 feet away from KVM switch with superior auto-adjust RGB gain / delay control capability		
IP-Based Remote Console Module (optional)	RJ-45 8P8C for 10 / 100M Ethernet DB9 male for Modem, Null modem and serial power control Mini USB 2.0 receptacle		
Daisy Chaining	Support Daisy Chaining with both Bus (8-layer) and Tree (2-layer) topologies, DB15 Female Connector		
Maximum connected	120	128	144

computers			
PC selection	On Screen Display (OSD) Menu, Hot Key		
Hotkey	Provide various Hotkey (Scroll-Lock / Cap-Lock / Num-Lock / Alt / Ctrl / Win)		
Security	Provide ACL (Access Control List) security function, store up to 8 independent controllable PC lists		
Multilingual OSD (On Screen Display) control	8 languages (English, France, German, Spanish, Italian, Russian, Japanese, Simplified Chinese)		
Auto-Scan Intervals	5 ~ 99 Sec.		
Keyboard Emulation	PS/2 or USB		
Mouse Emulation	PS/2 or USB		

Table 4-1. Technical Specifications

4.4 System Requirements

Model No.	LCD console with 8-port CAT5 KVM
Computer side	8 x CAT5 / 5E / 6 cable with dongles (optional)
IP module (option)	1 x CAT5 cable Network access environment
CAT5 module (option)	1 x CAT5 cable CAT5 KVM extender receiver 1 x VGA Monitor 1 x USB Keyboard 1 x USB Mouse Optional computer

Table 4-2. System Requirements

Model No.	LCD console with 16-port CAT5 KVM
Computer side	16 x CAT5 / 5E / 6 cable with dongles (optional)
IP module (option)	1 x CAT5 cable Network access environment
CAT5 module (option)	1 x CAT5 cable CAT5 KVM extender receiver 1 x VGA Monitor 1 x USB Keyboard 1 x USB Mouse Optional computer

Table 4-3. System Requirements

Model No.	LCD console with 32-port CAT5 KVM
Computer side	32 x CAT5 / 5E / 6 cable with dongles (optional)
IP module (option)	1 x CAT5 cable Network access environment
CAT5 module (option)	1 x CAT5 cable CAT5 KVM extender receiver 1 x VGA Monitor 1 x USB Keyboard 1 x USB Mouse Optional computer

Table 4-4. System Requirements

4.5 Cable Diagrams

CAT5 dongle

HDDDB15 male to one HDDDB15 male and two mini din 6-pin or one USB special cable

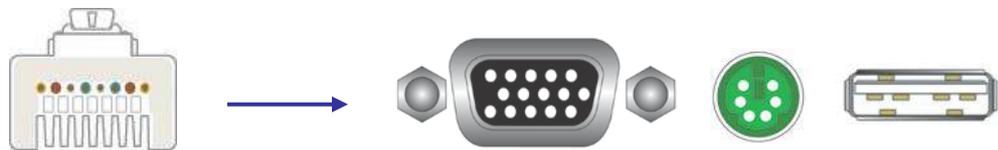


Figure 4-1. CAT5 dongle

Daisy Chain Cable:

HDDDB-15 pin Male to Male

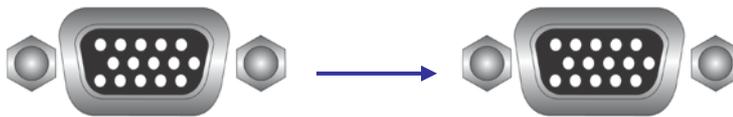


Figure 4-2. Daisy Chain Cable



Daisy chain needs the cable all 15 lines connected. This is a special VGA cable, normal VGA cable has unconnected lines. **Do not use other VGA cable for daisy chain.**

CAT5 / 5E / 6 Straight Through UTP / STP Cable



Pin	Wire Color	Pair	Function
1	White/Orange	2	T
2	Orange	2	R
3	White/Green	3	T
4	Blue	1	R
5	White/Blue	1	T
6	Green	3	R
7	White/Brown	4	T
8	Brown	4	R

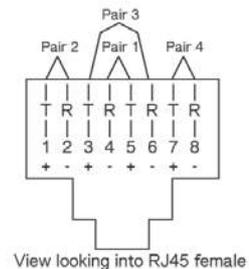



Figure 4-3. CAT5 / 5E / 6 Straight Through UTP / STP Cable (8P8C)

4.6 Product Details


Rear panel of 8-port CAT5 KVM:



Rear panel of 16-port CAT5 KVM:

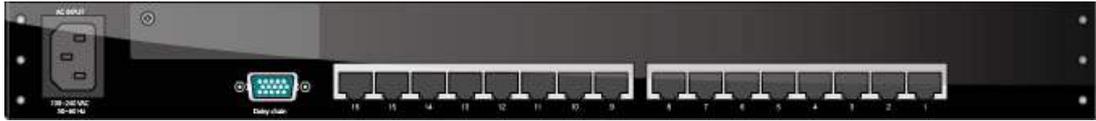


Rear panel of 32-port CAT5 KVM:

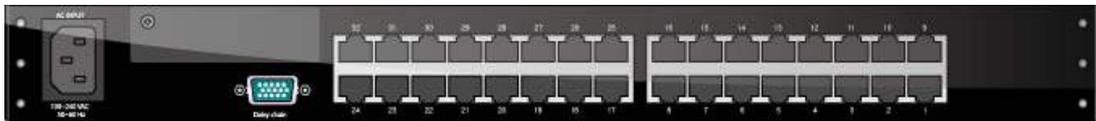


Rear panel of 8-port CAT5 KVM with IP module:



Rear panel of 16-port CAT5 KVM with IP module:

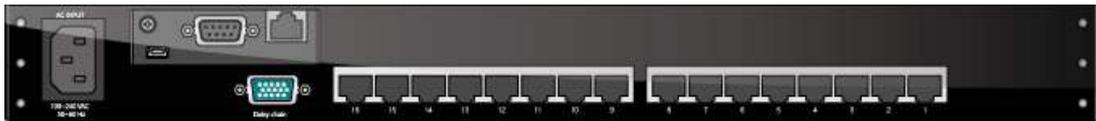


Rear panel of 32-port CAT5 KVM with IP module:

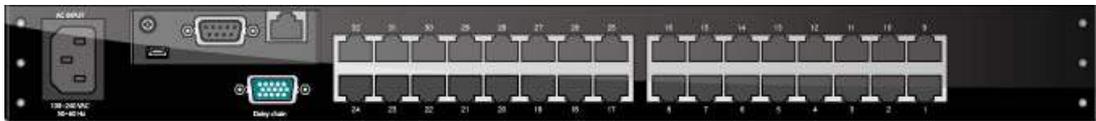

Rear panel of 8-port CAT5 KVM, with CAT5 module:



Rear panel of 16-port CAT5 KVM with CAT5 module:

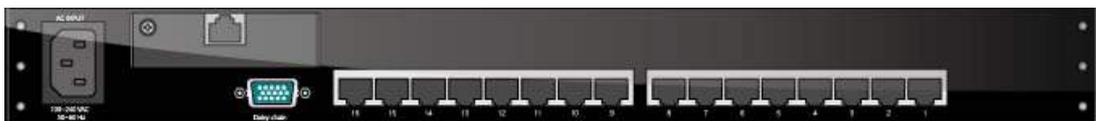

Rear panel of 32-port CAT5 KVM with CAT5 module:

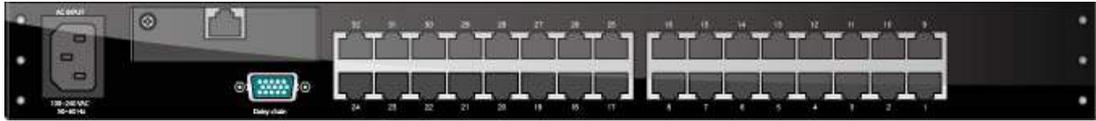


Figure 4-4. Rear Panel

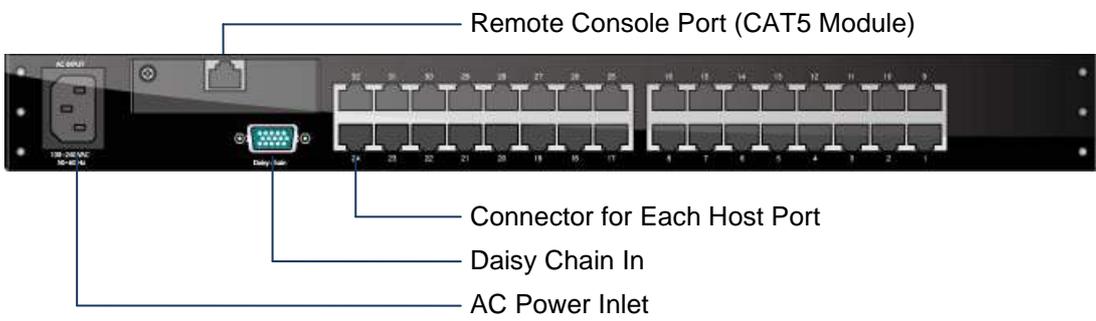


Figure 4-5. Rear Panel

4.7 Hardware Installation

Before installation, please make sure all of peripherals and computers have been turned off. This example of installation is based on 8 ports console and you also can think that 16 / 32 ports console have the same installation procedures.

4.7.1 Computer / Server Installation

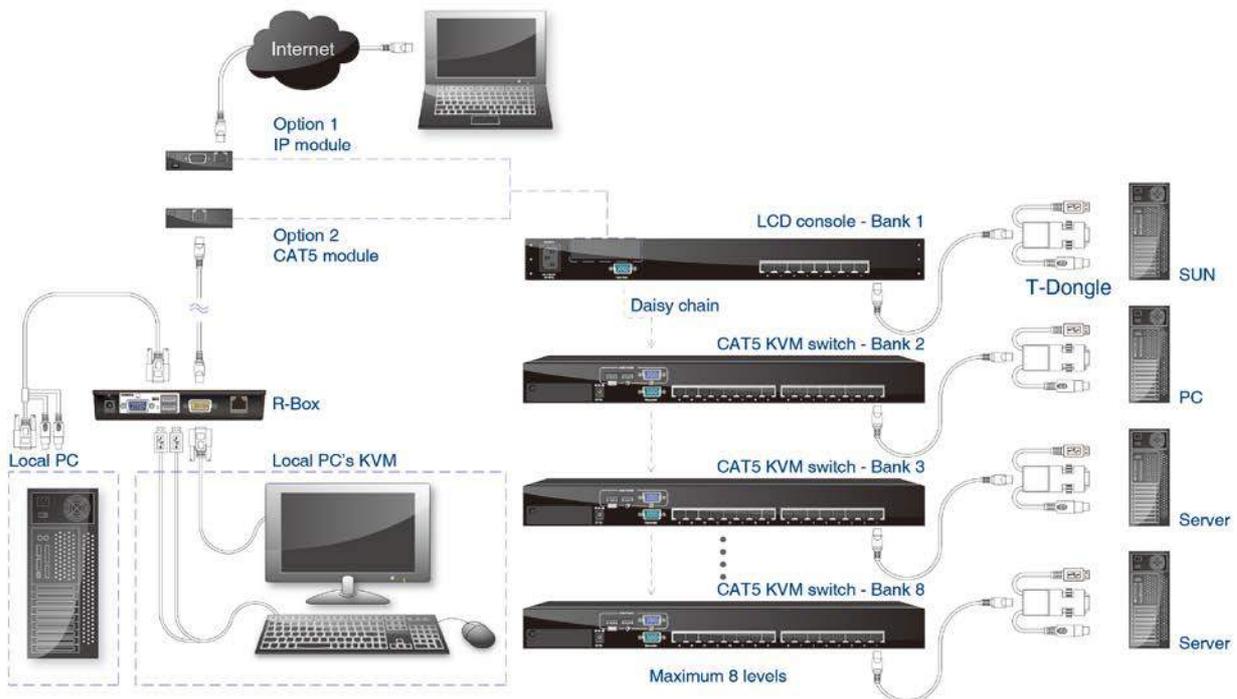


Figure 4-6. Computer / Server Installation

Dongle Installation

Each Host port connector is RJ45 type. Use CAT5 cable to connect CAT5 Transmitter (dongle).

1. A RJ45 connector for connecting CAT5 cable to KVM switch.
2. A HDDB15 male connector for PC / Server video VGA port
3. A USB connector for both USB keyboard and mouse.
4. A green mini din 6-pin type for mouse port, no use for USB computer.

Plug all these connectors into the respective ports of computer. Repeat the same procedure for all other computers.

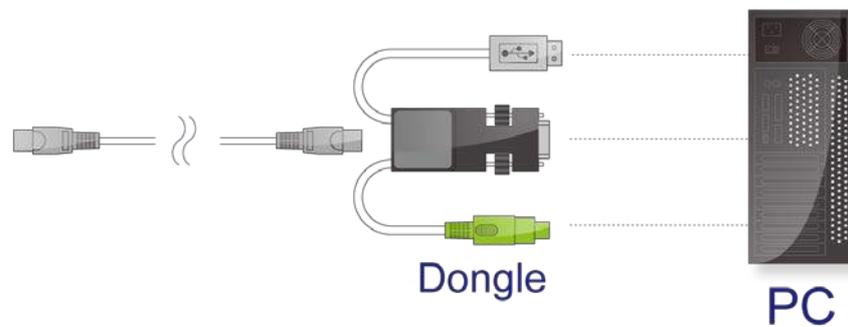


Figure 4-7. Dongle Installation



It is recommended to power off all the computers and server before the installation. If we can not turn off the computer, for PS/2 computer, please plug in dongle connectors in the following order: firstly PS/2 mouse connector, secondly PS/2 keyboard connector, thirdly the VGA connector to the PC.

4.7.2 Optional Remote Console Installation

4.7.2.1 IP Module

Please refer to “IP Module User Manual” for details.

IP Remote Console

Installation: Power off the LCD console firstly. Remove the cover of the add-on slot, slide in the IP Module and make sure the module is fully inserted into the slot.

The IP Module redirects local keyboard, mouse and video data to a remote administration console. It allows you to control one or many computers locally at the server site or remotely via the Internet using a standard browser.



Figure 4-8. IP-Module

Serial Power Control

The IP Module comes with a serial port for connecting to any serial device, such as serial PDU to provide remote power control, such as power on, power off, and power cycle for the connected computers / servers.

4.7.4 Daisy Chain Connection

Use one end of daisy chain cable to connect to the **Daisy Chain Port** of LCD console and connect the other end of daisy chain cable to the **Local Console Port** of the next Slave KVM switch. Please repeat the connection procedures for next Slave KVM switch. You can daisy chain up to eight banks in maximum.

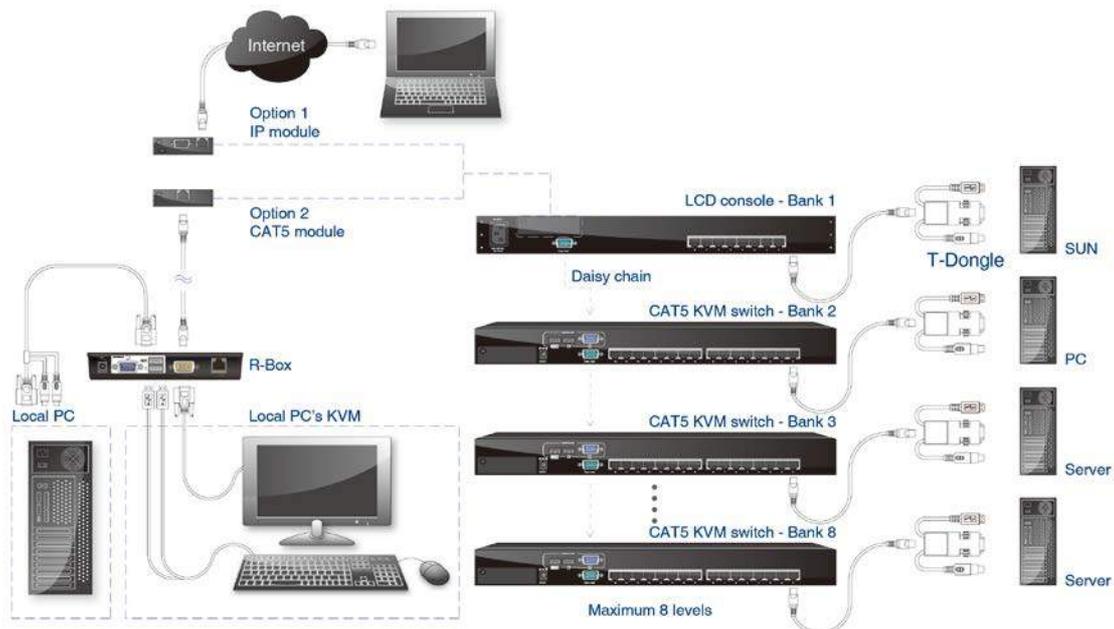


Figure 4-10. Daisy Chain Connection

The console OSD menu will show only the port information of the LCD console. When the LCD console starts up, it will query all daisy chained Slave units, and automatically set up the Bank ID for each Slave unit. Hot Plug function is supported in daisy chain connection. The Master unit will auto-query the daisy chained Slaves every 30 seconds.

4.7.5 Turning on the Console

Make sure all cables and the power cord are connected properly. Be sure to tighten all connector screws. Grab the front handle of the panel. Pull the panel all the way out then lift the panel up. This will disengage the momentary on / off switch and the unit should power on. And check on / off switch in the front of keyboard plate is on. The LED left or underneath of the panel will be green light. Then grab the handle of keyboard to pull the keyboard all the way out.

4.7.6 Testing the Console

To test that the console is working properly, perform the following steps:

1. Power up the console, and then turn on your computer.
2. Make sure the video image is centered within the screen area. Use the OSD controls to adjust the image (see note below) or press the Auto button on the left or underneath of the panel.



If the unit does not power on when the panel is pulled up, try to push the power on / off button underneath or on the left of the LCD panel to power up the unit.



You can adjust the horizontal and vertical position, contrast, and brightness to better suit your video card and your personal preference. Refer to Chapter 2 for more information on using the on-screen menu to adjust the video display

Before you begin, make sure that powers to all the devices you will be connecting up have been turned off. To prevent damage to your installation due to ground potential difference, make sure that all the devices on the installation are properly grounded. Consult your direct vendor for any technical issues if necessary.

4.8 Hotkey

You can also conveniently command KVM switch by switching ports through simple key sequences. The default hot key is **SCROLL LOCK** and the user could change hot key as your convenient application. If you prefer to use some hot key, please go to OSD menu and change the default hot key to the other. To send commands to KVM switch, the **SCROLL LOCK** key must be pressed twice within 2 seconds. You will hear a beep for confirmation and the keyboard is in Hotkey mode. Then you have to enter **Command** in 2 seconds. If you have not pressed any key during Hotkey mode over 2 seconds the Hotkey mode will be escaped and back to Operation System control state. A Command should be issued in Hotkey mode in 2 seconds.

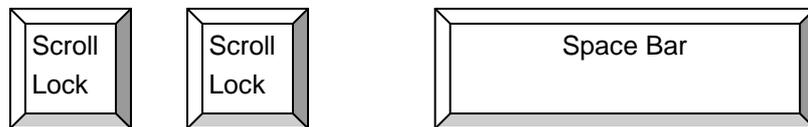


Figure 4-11. Hotkey

Command	Function
Space bar	Active OSD
↑	Previous Channel
↓	Next Channel
[1,2,...,8] bank, [01,02,...,32] port	First digit bank number start with 1 Second and third digits port number start with "01"
PgUp	Previous bank
PgDn	Next bank
"B"	Turn on / off beeper
"S"	Auto Scan
"U"	Console Security "ON" to "OFF"
"P"	User logout / login
"R"	OSD setting back to factory default value
"L"	Turn on / off power saving

Table 4-5. Hotkey

Example: hitting Scroll Lock twice then hitting key 1, key 0, and key 1 will switch to bank 1 port 01. The first port is local at bottom right at the back panel.

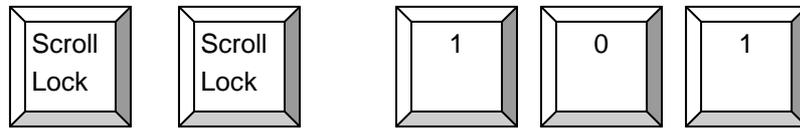


Figure 4-12. Hotkey Example

There are two methods to activate the OSD menu.

1. Activate OSD by Mouse

Hold the left mouse button press and release the Esc key will activate the Port Display. Hold the right mouse button press and release the Esc key will activate the OSD.

2. Active OSD by press Hotkey twice then press Space bar.

4.9 OSD (On Screen Display)

On Screen Display Menu provides a menu driven interface to handle a Multilingual Menu, Access Security, Computers switching process, to name a PC name or server name, to set up the password / window display time and to search PC port name if you don't remember it.

It allows two console users to access the same PC and only one of users has been linked to this PC first, another user can only view the same PC.

This OSD Menu has 3 tiers dialog window:

1. **Login Window** --- When powering on this LCD console, it will prompt a login window and ask for user name and password. This KVM system can setup one SUPERVISOR and eight USERS. Before not setting up administrator user's name and his password, none of administrator users could access OSD menu. When you login with Supervisor, please go to USER SECURITY to set up one new SUPERVISOR or USERS. SUPERVISOR can access all Main menu options. USER can access PORT NAME and PORT SEARCH for switching.
2. **Port Name**--- port switching using OSD
3. **Main Menu**--- 8 menus to operate this KVM switch

MAIN MENU	Function
01 LANGUAGE	OSD language change
02 PORT NAME EDIT	PORT NAME modification
03 PORT SEARCH	quick searching by port name
04 USER SECURITY	Change password
05 ACCESS LIST	Define user access authority
06 HOT KEY	Change Hotkeys
07 TIME SETTINGS	Modify SCAN time interval
08 OSD MOUSE	Modify OSD MOUSE speed

Table 4-6. OSD Main Menu

4.9.1 Login Window

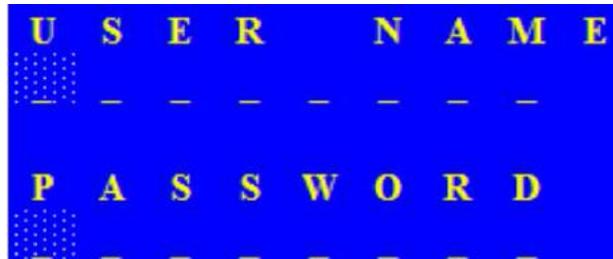


Figure 4-13. Login Window

Turn on local console monitor and power on by plug in the power adapter, there will be login window at screen. No input for username and password over 1 minute at login windows the monitor's signal will be turn off. The default SUPERVISOR user name is all eight zero digits "00000000" ..

The password is all eight zero digits "00000000" . . .

After login on or port switch either by panel button, OSD or Hotkey, the screen will display the following information, one digit BANK NUMBER, two digit PORT NUMBER, PORT NAME and current Hotkey, any input or mouse move the screen will back to PC.



Figure 4-14. Login Window

Security Logout

No input for username and password over 1 minute at login windows the console monitor's signal will be turn off.

At normal operation, no input from console keyboard or mouse over 10 minutes the LCD console will turn off the screen display then go to Login Windows ask for user name and password.

4.9.2 Port Name



Figure 4-15. Port Name

OSD Function Key	Description
F1	Go to Main Menu
F2	CONSOLE OFF
F3	Previous Menu
Enter	Switch to Selected Port
↑ / ↓	Move Select
PgUp	Previous Bank
PgDn	Next bank
Esc	Quit
1	Show port 01 ~ 08
2	Show port 09 ~ 16
3	Show port 17 ~ 24
4	Show port 25 ~ 32

Table 4-7. OSD Function Key

CONSOLE OFF – logout so the next person needs to enter user name and password in order to do operation on this KVM system

USER: There are two type of user SUPERVISOR and USER. SUPERVISOR can setup the change the OSD settings at Main Menu. USER can do Port switch and Port Search only.

4.9.3 Main Menu



Figure 4-16. Main Menu

OSD Function Key	Description
Enter	Select
↑ / ↓	Move
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-8. OSD Function Key

4.9.3.1 LANGUAGE

The default language is ENGLISH. Moving the cursor by keyboard -- Up Arrow key “↑” or the Down Arrow key “↓” or mouse to select language as you need.

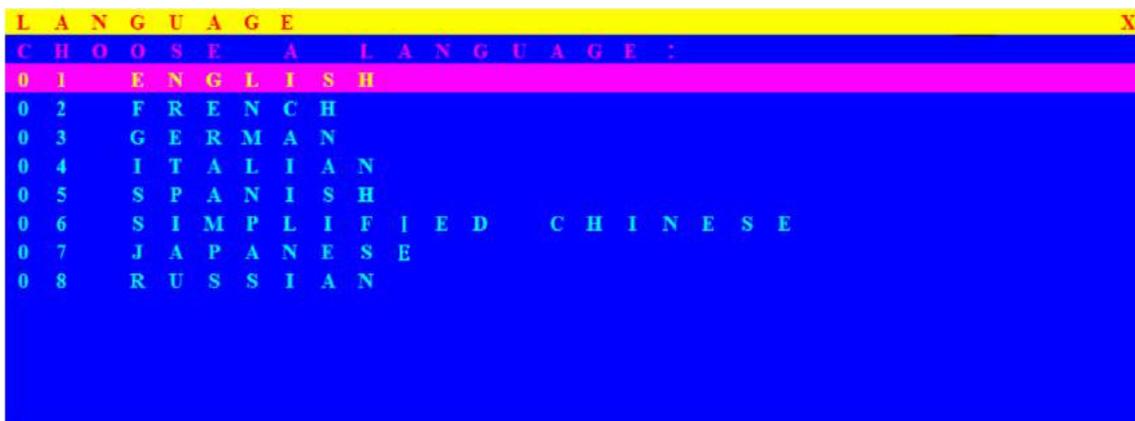


Figure 4-17. Language

4.9.3.2 PORT NAME EDIT

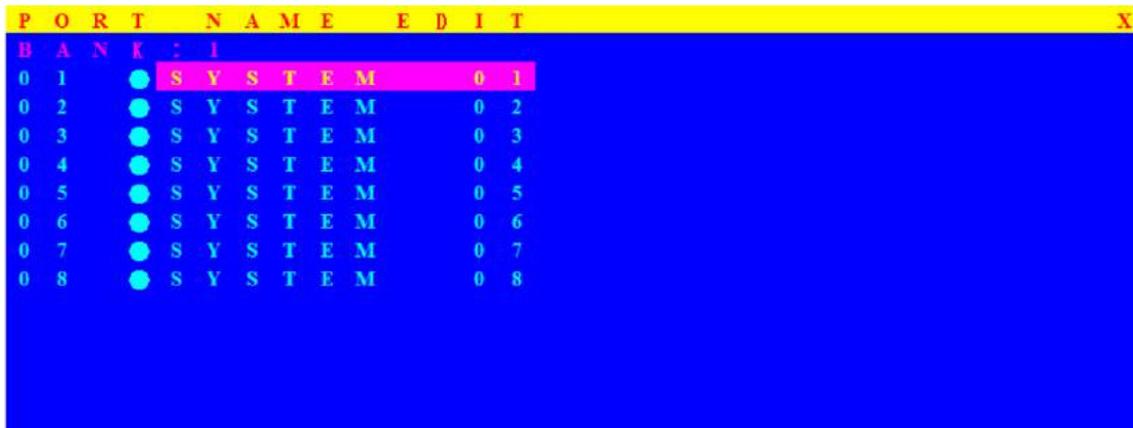


Figure 4-18. Port Name Edit

OSD Function Key	Description
Enter	Port Name Edit
↑ / ↓	Move
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit
1	Show port 01 ~ 08
2	Show port 09 ~ 16
3	Show port 17 ~ 24
4	Show port 25 ~ 32

Table 4-9. OSD Function Key

The first line bar is Bank number, following lines are port name list.

Use Up Arrow key “↑”, Down Arrow key “↓” or OSD MOUSE to move. After you have selected the PC port already, you can either press the Enter” ← “Key, or Move the cursor to PC name double clicks the left button of mouse to switch the PC port immediately. Press PgUp key or PgDn key for selecting previous or next Bank.

Press the Up Arrow key “↑” or the Down Arrow key”↓” to select “system 02 “ and press Enter”← ” key to switch current PC port to PC port 2, or moving cursor to SYSTEM 02 and double clicks the left button of mouse to switch current PC port to PC port 2.

Press “ **Ins**” key or click the right button of mouse for editing PC name.
 Press “ **Esc**” key to cancel editing PC name without any change or Enter” ↵ ” key to complete the new PC name.

4.9.3.3 PORT SEARCH

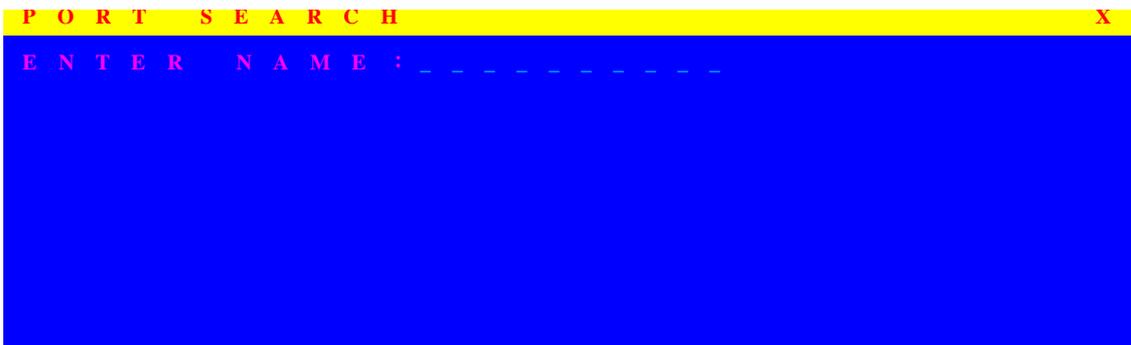


Figure 4-19. Port Search

OSD Function Key	Description
Enter	Start Port Search
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-10. OSD Function Key

Search the computer by port name. Enter “*” will show the all the port.

4.9.3.4 USER SECURITY

At USER SECURITY of OSD can setup one SUPERVISOR and eight ADMINISTRATORS all with 8 digits name and password.

U S E R S E C U R I T Y X														
	N A M E							P A S S W O R D						
S	-	-	-	-	-	-	-	-	-	-	-	-	-	
1	-	-	-	-	-	-	-	-	-	-	-	-	-	
2	-	-	-	-	-	-	-	-	-	-	-	-	-	
3	-	-	-	-	-	-	-	-	-	-	-	-	-	
4	-	-	-	-	-	-	-	-	-	-	-	-	-	
5	-	-	-	-	-	-	-	-	-	-	-	-	-	
6	-	-	-	-	-	-	-	-	-	-	-	-	-	
7	-	-	-	-	-	-	-	-	-	-	-	-	-	
8	-	-	-	-	-	-	-	-	-	-	-	-	-	

Figure 4-20. User Security

OSD Function Key	Description
Enter	Enter user name
→ ↑ ← ↓	Move
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-11. OSD Function Key

Press “ENTER” key to get USERS list. The left column “S” means SUPERVISOR and “1”, “2”, “3”, …, “8” mean ADMINISTRATOR. The maximum NAME is eight characters maximum (A~Z and 0~9) and PASSWORD is eight characters maximum (A~Z and 0~9).

4.9.3.5 ACCESS LIST

A C C E S S L I S T X															
B A N K	:	I					1	2	3	4	5	6	7	8	
0	1	●	S	Y	S	T	E	M	0	1	0	0	0	0	0
0	2	●	S	Y	S	T	E	M	0	2	0	0	0	0	0
0	3	●	S	Y	S	T	E	M	0	3	0	0	0	0	0
0	4	●	S	Y	S	T	E	M	0	4	0	0	0	0	0
0	5	●	S	Y	S	T	E	M	0	5	0	0	0	0	0
0	6	●	S	Y	S	T	E	M	0	6	0	0	0	0	0
0	7	●	S	Y	S	T	E	M	0	7	0	0	0	0	0
0	8	●	S	Y	S	T	E	M	0	8	0	0	0	0	0
0	9	●	S	Y	S	T	E	M	0	9	0	0	0	0	0
1	0	●	S	Y	S	T	E	M	1	0	0	0	0	0	0
1	1	●	S	Y	S	T	E	M	1	1	0	0	0	0	0
1	2	●	S	Y	S	T	E	M	1	2	0	0	0	0	0
1	3	●	S	Y	S	T	E	M	1	3	0	0	0	0	0

Figure 4-21. Access List

OSD Function Key	Description
Enter	Select
→ ↑ ← ↓	Move
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-12. OSD Function Key

Only SUPERVISOR can set up the ACCESS LIST. The first column is the PC name list the following 8 column the access right of each ADMINISTRATOR use OSD MOUSE or Enter key to active / inactive the access right of each port. “X” means to disable access and “O” means to enable access.

4.9.3.6 HOTKEY

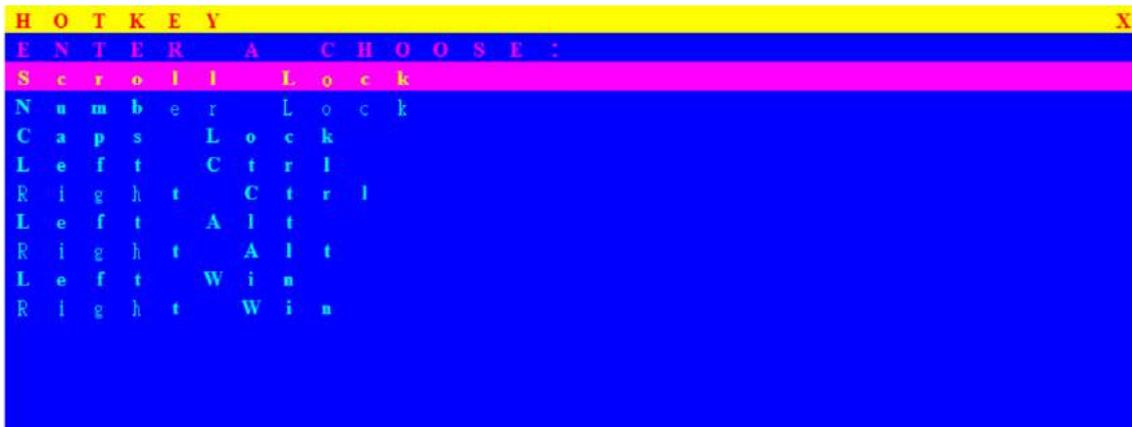


Figure 4-22. Hotkey

OSD Function Key	Description
Enter	Select
→ ↑ ← ↓	Move
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-13. OSD Function Key

Some keyboard may not equip with all the special keys. Make sure the key you select is available in you keyboard.

4.9.3.7 TIME SETTINGS



Figure 4-23. Time Settings

OSD Function Key	Description
Enter	Save
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-14. OSD Function Key

The “SCAN TIME: 10 SEC” means that scan interval from one PC port to next PC port. The default SCAN time is 10 seconds and the maximum scan time is 99 seconds, can not use number pad. Press “**Enter**” key to save SCAN TIME.

4.9.3.8 OSD MOUSE

You can change the move speed of mouse cursor in his item. There are three levels you can choose in it. The fastest move speed is “FAST”, the second is “MIDDLE” and the slowest is “SLOW”. Using “**↑**” and “**↓**” key on keyboard to move highlight bar and select what move speed you want to use. After press Enter Key, the mouse cursor move speed will change.



Figure 4-24. OSD Mouse

OSD Function Key	Description
Enter	Save
↑ / ↓	Move
F1	Go to Main Menu
F2	Console off
F3	Back
Esc	Exit

Table 4-15. OSD Function Key

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2018 Synergy Global Technology Inc All rights reserved.